



LEICA M10 - 4.26.36.10

LEICA M10 MONOCHROM - 5.26.35.51

LEICA M10-P - 5.26.35.51

LEICA M10-P ASC - 4.26.36.10

LEICA M10-R - 40.26.35.51

NEW

- Lens Profile: Summicron-M 66 f/2



FIRMWARE UPDATES

Leica is continuously working on the further improvement and optimization of your camera. Since many camera functions are entirely controlled by software, some of these improvements and additions to the functional scope can be installed in retrospect. Leica offers firmware updates at irregular intervals, which you can download from our website.

Finding the currently installed firmware version

- Select **Camera Information** in the main menu
 - The current firmware version is displayed next to the menu item **Camera Firmware**.

More information about registering, firmware updates and how to download them to your camera, as well as any amendments and additions to this manual can be found in the customer area of our website at:

club.leica-camera.com

EXECUTING A FIRMWARE UPDATE

Any interruption of a running firmware update may cause serious and irreparable damage to your equipment!

You will therefore have to take particular note of the following, when carrying out a firmware update:

- Do not switch off the camera!
- Do not remove the memory card!
- Do not remove the rechargeable battery!
- Do not detach the lens!

Notes

- A warning message will appear if the battery is insufficiently charged. Recharge the battery and then repeat the process described above.
- You will find additional device and country-specific registration marks and numbers in the **Camera Information** submenu.

PREPARATION

- Fully charge and insert the rechargeable battery
- Any stored firmware files on the memory card must be removed
 - We recommend saving any images on the memory card and reformatting it before the update.
(Caution: Loss of data! All data stored on the memory card will be lost during formatting.)
 - Make sure to back up any files saved to the internal memory as a precaution.
- Download the latest firmware version
- Save the download to the memory card
 - The firmware file must be stored in the main directory of the memory card (not in a sub-directory).
- Insert the memory card into the camera
- Switch the camera on

UPDATING THE CAMERA FIRMWARE

M10 / M10-P / M10-P ASC / M10 Monochrom / M10-R

- Download the latest firmware version
- Save the download to the memory card
- Insert the memory card into the camera
- Switching the camera on
- Select **Camera Information** in the main menu
- Select **Camera Firmware**
 - This menu item is available only if a current firmware file is stored on the inserted memory card.
 - A prompt with information about the camera is displayed.
- Check the version information
- Select **Yes**
 - The update will start automatically.
 - Once the process has completed successfully, a relevant message will be displayed and the camera will restart.

Notes

- It is recommended to revert to factory settings after an update.
- Date & time, as well as the preferred language will have to be set up again after a reset. Relevant prompts will appear on screen.

UPDATING THE CAMERA FIRMWARE

M10-D

- Save the firmware file to an SD card
- Ensure that the camera is switched **OFF**
- Press and hold the function button and switch on the camera
 - **UP** will appear in the viewfinder during the update process
 - In case of an error, **Err** will be displayed
 - **End** will appear after a successful update is completed

USING A LEICA M LENS WITHOUT 6-BIT ENCODING

With the Leica M10-D, Leica M lenses without 6-bit coding are used with a standard profile. Since there is no automatic or manual lens recognition, no lens information is stored in the EXIF data, and no lens-specific image corrections are applied.

Of course, the lens can be used without restriction. The images reflect the natural imaging characteristics of the lens used.