

FIRMWARE 2.20.48.40

_EXTENDED: Lens Profiles

FIRMWARE UPDATES

Leica is continuously working on the further improvement and optimization of your camera. Since many camera functions are entirely controlled by software, some of these improvements and additions to the functional scope can be installed in retrospect. Leica offers firmware updates at irregular intervals, which you can download from our website.

Leica will notify you of any new updates, once you have registered your camera.

More information about registering, firmware updates and how to download them to your camera, as well as any amendments and additions to this manual can be found in the customer area of our website at: club.leica-camera.com

UPDATING THE CAMERA FIRMWARE

- Download the latest firmware version
- Save the download to the memory card
- Insert the memory card into the camera
- Press and hold the function button and switch on the camera
 - UP will appear in the viewfinder during the update process
 - In case of an error, Err will be displayed
 - End will appear after a successful update is completed

Notes

- The camera must not be switched off before the update is completed.
- A warning message will appear if the battery is insufficiently charged. Recharge the battery and then repeat the process described above.

ΕN

LENS PROFILES

The list of automatically detectable Leica-M lenses was extended.