



Installation instructions for the Leica T (Typ 701) - **Firmware 1.55**

Dear Customers,

By installing the firmware 1.55 on your Leica T (Typ 701) you will gain additional functions and performance for your camera.

Update Contents

Model Number	LEICA T (Typ 701)
Update Version	Version 1.55
Update File Name	T701_V155.TUF.zip T701_V155.TUF

Description

Version	Description
Version 1.55	<u>Performance Improvements:</u> ➤ Full compatibility and AF performance for new APO-Macro-Elmarit-TL 60mm/f2.8 ASPH.
Version 1.51	<u>Bug Fixes:</u> ➤ Hang up of camera during Leica App usage with Visoflex attached solved
Version 1.5	<u>Performance Improvements:</u> ➤ <u>WiFi DIRECT Mode:</u> The camera can create a WiFi Access Point (AP) and by that enables smart devices to connect to the camera directly. ➤ <u>WiFi connection:</u> Automatic reconnection to known networks is enhanced in terms of reliability and speed. <u>Bug Fixes:</u> ➤ WiFi connection hang up solved
Version 1.4	<u>Performance Improvements:</u> ➤ <u>Start Up Time:</u> the startup time of the camera is - compared to earlier firmware versions - significantly shortened (<0,75s) ➤ <u>AF speed:</u> 1.4 features almost 100% improvement in AF response speed compared to earlier firmware (*metering method CIPA Standard: now 460ms compared to 860ms with earlier firmware versions) ➤ <u>Gesture operation:</u> the responsiveness and reaction time is overall improved, particularly the play mode scroll and tap gestures are considerably more smooth and reactive

- Compatibility to new TL lenses and SL lenses:

Attention: Without the firmware 1.4 and higher the SL lenses are not supported on the Leica T

Bug Fixes:

- Audio/video sync
- DNG + Jpeg in App remote modus
- AF in APP remote modus
- Malfunction of dials

Firmware Update Procedure

1. Download an updated version of the firmware and double click on the ZIP-file to unpack it.
2. Copy the firmware file onto a SD Memory Card in its top level folder.
3. Make sure to turn off the power switch on the camera.
4. Insert the fully charged battery to the body. If the battery is not fully charged, the update process screen will not appear.
5. Insert the SD Memory Card into the camera.
6. Turn the camera – while simultaneously pressing the video release button – on.
7. The firmware update screen will appear. Press OK.
8. The LEICA T will start the update process. The firmware update will take about 90 seconds.
9. After the update process please restart the camera.

CAUTION:

Please do **not** turn off your camera, or do **not** remove the SD Memory Card, do **not** remove the lens while updating your camera's firmware.

DOING SO CAN CAUSE A SERIOUS DAMAGE TO YOUR CAMERA!