



L-Mount | Firmware installation Instruction for L-Mount lenses with Leica SL-Cameras I

Please follow these steps to install new firmware on your L-mount lens:

This instruction describes the update process if you are using a Leica SL to update the firmware of your L-Mount lens.

SL-lens firmware updates are normally already included in the SL-camera firmware.

Preparation camera

1. It is recommended to use a fully charged battery to execute the update.
2. It is recommended to format the memory card inside the camera.
3. Remove the SD card from the camera.
4. Prepare the SD card for installation:
 - a. Delete all existing update files (camera or lens) from the SD card.
 - b. Copy the firmware file for the L-Mount lens to the root directory of the SD card.
 - c. Insert the SD card into the camera.



L-Mount | Firmware installation Instruction for L-Mount lenses with Leica SL-Cameras II

Installation new lens firmware

4. Switch on the camera.
5. Go to MENU / Main Menu / Camera Information / Lens Firmware Version
6. Press “Start Update” and confirm to start the process:
 - a. The camera will guide you through the process of updating your lens.
 - b. Start Update process and wait until the update installation is completed.
 - c. Restart the camera; do not eject the SD card.
7. The update process is completed successfully.

CAUTION:

Please do **not** turn off your camera. Do **not** remove the battery. Do **not** remove the SD Memory Card. Do **not** remove the lens while updating your camera firmware or lens firmware.

DISREGARDING THIS ADVICE CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA AND YOUR LENS.