



Installation instructions for the Leica M MONOCHROM (Typ 246)

Firmware 1.0.2.0 M MONOCHROM (Typ 246)

Dear Customers,

Installing the firmware on your Leica M will add additional functions.

Update Contents

Model Number	LEICA M MONOCHROM (Typ 246)
Update Version	div.
Update Filename	div.

Overview

Version	Description
Version 1.0.2.0	<ul style="list-style-type: none">- Support for the new Thambar-M 90 f/2.2- Support for the new Noctilux-M 75 f/1.25 ASPH.- A Bug, that lead to occasional underexposure when using a flash unit, was fixed



Instructions for updating the LEICA M firmware

1. Format an SD memory card in your Leica M.
2. Turn off the camera and insert the card into an SD card reader – either integrated or connected to your computer. (A reader is required for Firmware updates).
3. Download the Firmware file from the Leica M site using the “DOWNLOAD” link.
4. Save the file M_246-1.0.2.0-CUSTOMER.FW at the top level of the card’s folder structure.
5. Remove the card properly from your card reader, insert the card into the camera and close the bottom cover.
6. Press the “INFO” button and hold it, simultaneously turn on the camera using the main switch.
7. The update process takes several 2-4 minutes. “Loading file...” appears on the screen.
8. When the update is done, a corresponding message appears on the screen. The Message disappears after some seconds.

Note:

- When installing the new Firmware version, all user profiles will be deleted and need to be set again after the new firmware is installed. We recommend taking note of the specific settings before updating.
- If the battery does not have sufficient charge, you will see a corresponding warning message

CAUTION:

Please do **NOT** turn off your camera or remove the Battery or SD Memory Card while the update is running.

DISREGARDING THIS ADVICE CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA!