



**LEICA M10 / LEICA M10-R / LEICA M10-P
LEICA M10-D / LEICA M10 MONOCHROM
LEICA M10-P ASC**

Firmware updates

FIRMWARE

LEICA M10: 3.22.23.38

LEICA M10-R: 30.22.23.34

LEICA M MONOCHROM: 4.22.23.34

LEICA M10-D: 3.22.23.52

LEICA M10-P: 4.22.23.34

LEICA M10-P ASC: 3.22.23.52

_NEW: Lens profiles

FIRMWARE UPDATES

Leica is continuously working on the further improvement and optimization of your camera. Since many camera functions are entirely controlled by software, some of these improvements and additions to the functional scope can be installed in retrospect. Leica offers firmware updates at irregular intervals, which you can download from our website.

Leica will notify you of any new updates, once you have registered your camera.

Find out which firmware version is currently installed

- ▶ Select **Camera Information** in the main menu
 - The current firmware version is displayed next to the menu item **Camera Firmware**.

More information about registering, firmware updates and how to download them to your camera, as well as any amendments and additions to this manual can be found in the customer area of our website at:

club.leica-camera.com

UPDATING THE CAMERA FIRMWARE

- ▶ Download the latest firmware version
- ▶ Save the download to the memory card
- ▶ Insert the memory card into the camera
- ▶ Switching the camera on
- ▶ Select **Camera Information** in the main menu
- ▶ Select **Camera Firmware**
 - This menu item is available only if a current firmware file is stored on the inserted memory card.
 - A prompt with information about the camera is displayed.
- ▶ Check the version information
- ▶ Select **Yes**
 - The update will start automatically.
 - Once the process has completed successfully, a relevant message will be displayed and the camera will restart.

Notes

- The camera must not be switched off before the update is completed.
- A warning message will appear if the battery is insufficiently charged. Please recharge the battery and then repeat the process described above.

UPDATING THE CAMERA FIRMWARE M10-D

- ▶ Preparation
- ▶ Press and hold the function button and switch on the camera
 - The update will start automatically.
 - **UP** will appear in the viewfinder during the update process.
 - In case of an error, **Err** will be displayed
 - **End** will appear after a successful update is completed.

Notes

- The camera must not be switched off before the update is completed.
- A warning message will appear if the battery is insufficiently charged. Recharge the battery and then repeat the process described above.