

Installation instructions for the Leica M10-R

Firmware 10.20.27.20

Dear Customers,

Installing the latest firmware on your Leica M10-R will improve the performance of the “focus-peaking”.

Update Contents

| | |
|---------------------------|--------------------------------|
| Model | LEICA M10-R |
| Update version | 10.20.27.20 |
| Name of the Firmware file | M10-R-10.20.27.20 -CUSTOMER.FW |

Overview

| Version | Description |
|-------------|--|
| Version | |
| 10.20.27.20 | <ul style="list-style-type: none">Focus-peaking. <i>Better performance of the focus-peaking in low-light situation.</i> |

Please follow these steps to install the new firmware for your Leica M10-R camera:

Recharge the battery to 100% and insert the battery into the camera.

1. Download the new firmware file to your computer.
2. Prepare the SD card for installation:
 - a. Please make sure that the card contains at least 200 MB of free disk space.
 - b. It is recommended to format the card inside the camera before continuing.
 - c. Download the new firmware file to your computer.
 - d. Copy the firmware file to the root directory of the SD card.
 - e. Eject the SD card properly from your computer.
3. Insert the SD card into the camera and switch the camera on.
4. Go to Main Menu / Camera Information / Camera Firmware
5. Press "Yes" to confirm and start the process;
 - a. You should save your current profiles to the SD card before proceeding with the update.
 - b. Wait until the update installation is completed. (**Note: This update will take significantly longer as previous updates, up to 10 min**)
 - c. Restart the camera; do not eject the SD card.
 - d. Please load your last saved profiles from the SD card after the first startup.
6. The update process is complete.

CAUTION:

Please do **NOT** turn off your camera, remove the Battery, or remove the SD Memory Card while the update is running.

DISREGARDING THIS WARNING CAN CAUSE SERIOUS DAMAGE TO YOUR CAMERA!

PLEASE NOTE:

Single cameras from the very first production lot can show a striking behavior: After the update is successfully done, the Live View shows a purple/reddish tint.
In this case the camera needs to be resetted (choose the menu option „reset“). After the reset, this behavior will never occur again.