




LEICA S

Quickstart guide


TABLE OF CONTENTS

CHARGE BATTERY	4
INSERT BATTERY	4
INSERT MEMORY CARD	5
MOUNT & UNMOUNT LENS	5
OPERATION ELEMENTS	6
INTERFACES	7
BOTTOM VIEW	7
VIEWFINDER	8
STATUS SCREEN	9
TOP DISPLAY	10
SWITCH ON CAMERA	11
TAKING PHOTOS / VIDEO RECORDING	11
VIDEO SETTINGS	12
VIDEO STORAGE	13
EXTERNAL AUDIO	13
ENTER STATUS SCREEN & PLAY MODE	14
ENTER MENU & PLAY MODE	14
MENU	15
MENU - QUICK ACCESS / CUSTOMIZE CONTROLS	16
BASIC CAMERA SETUP	17
PLAY MODE PHOTO	18
PLAY MODE VIDEO	19
PLAY MODE INFO SCREENS	20
EXPOSURE CONTROL MODES	21
LIVEVIEW PHOTO	22
LIVEVIEW PHOTO - SCREENS	23
LIVEVIEW VIDEO	24
LIVEVIEW VIDEO - SCREENS	25
WLAN SETUP	26
WLAN CONNECTION TO SMARTPHONE/TABLET	27
LIGHTROOM TETHERED PLUG-IN INSTALLATION	28
TETHERED SHOOTING - ADOBE™ PHOTOSHOP™ LIGHTROOM™ WORKFLOW	34
TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW	38
MENU LIST	41

 
CHARGE BATTERY

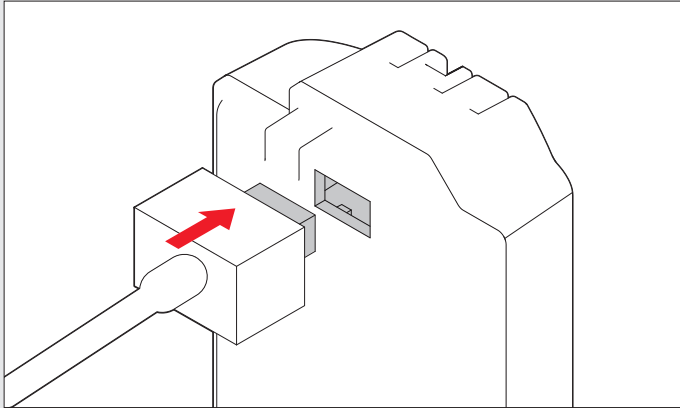


INSERT BATTERY

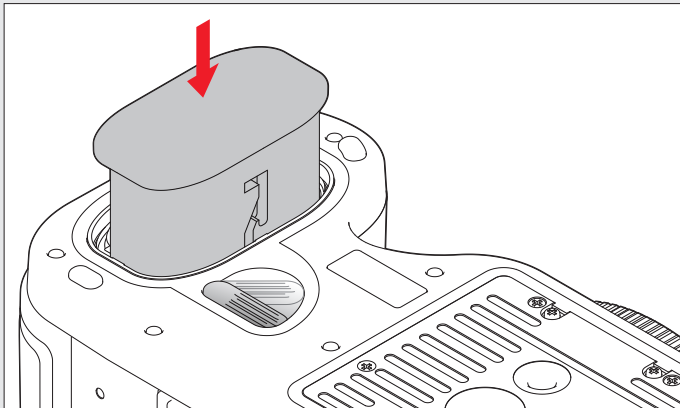 



INSERT MEMORY CARD

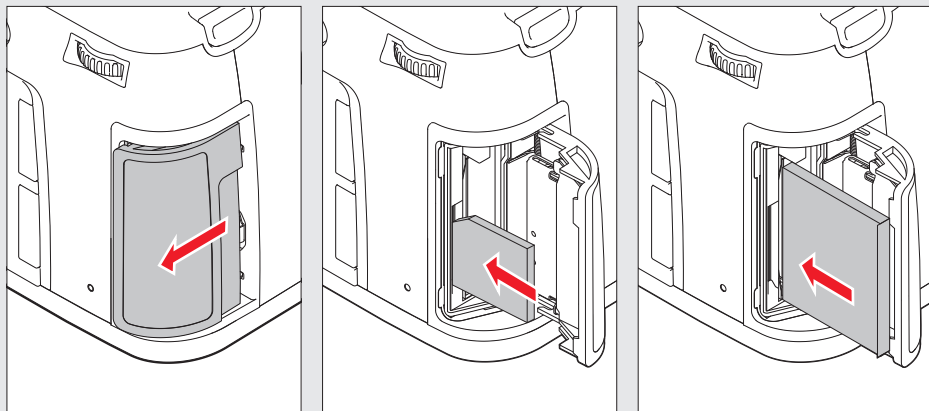 


MOUNT & UNMOUNT LENS

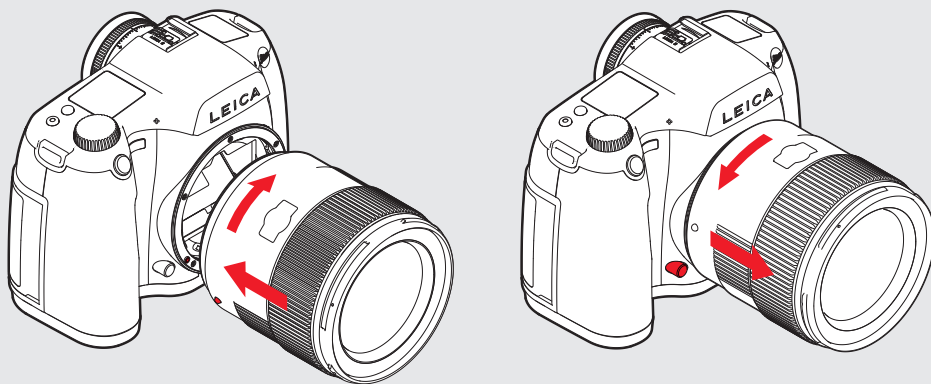 


OPERATION ELEMENTS

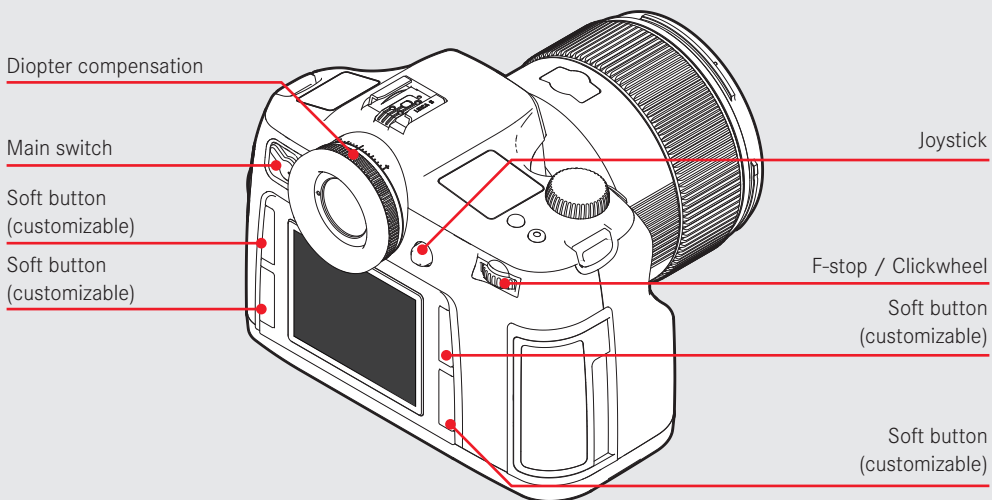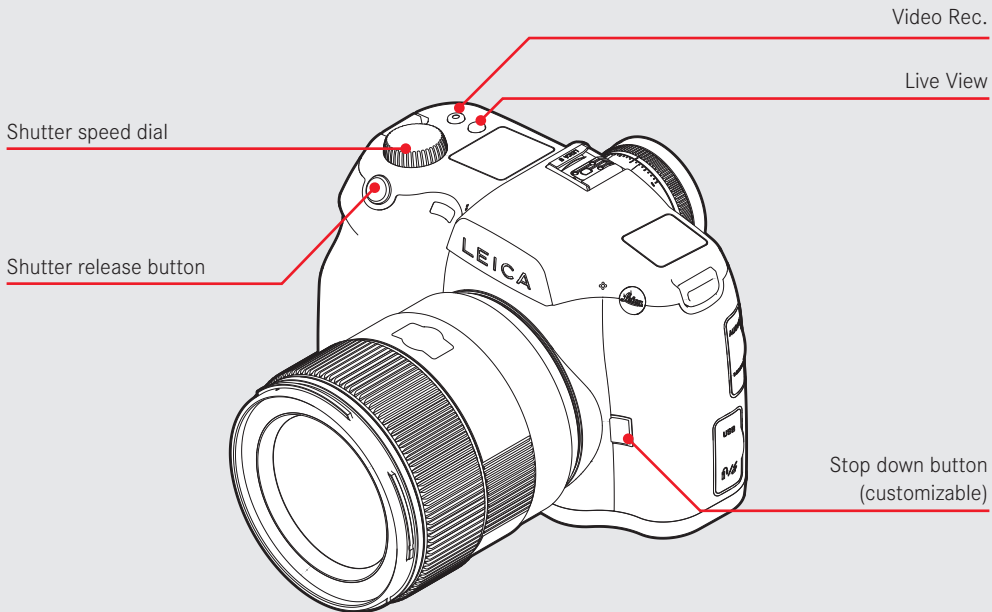  


INTERFACES

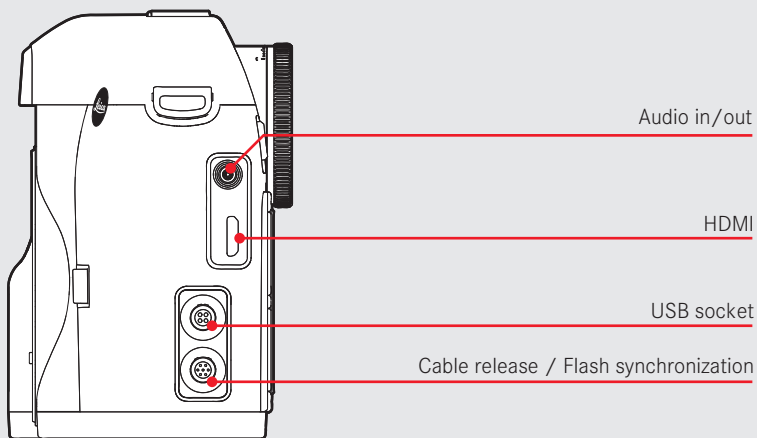 

BOTTOM VIEW

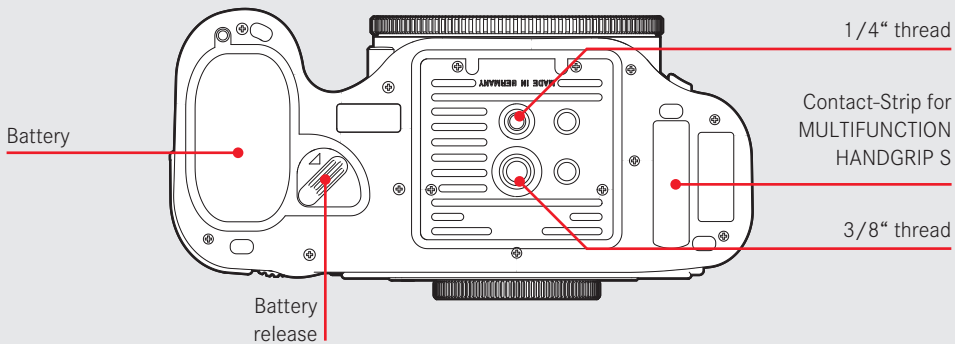 

VIEWFINDER

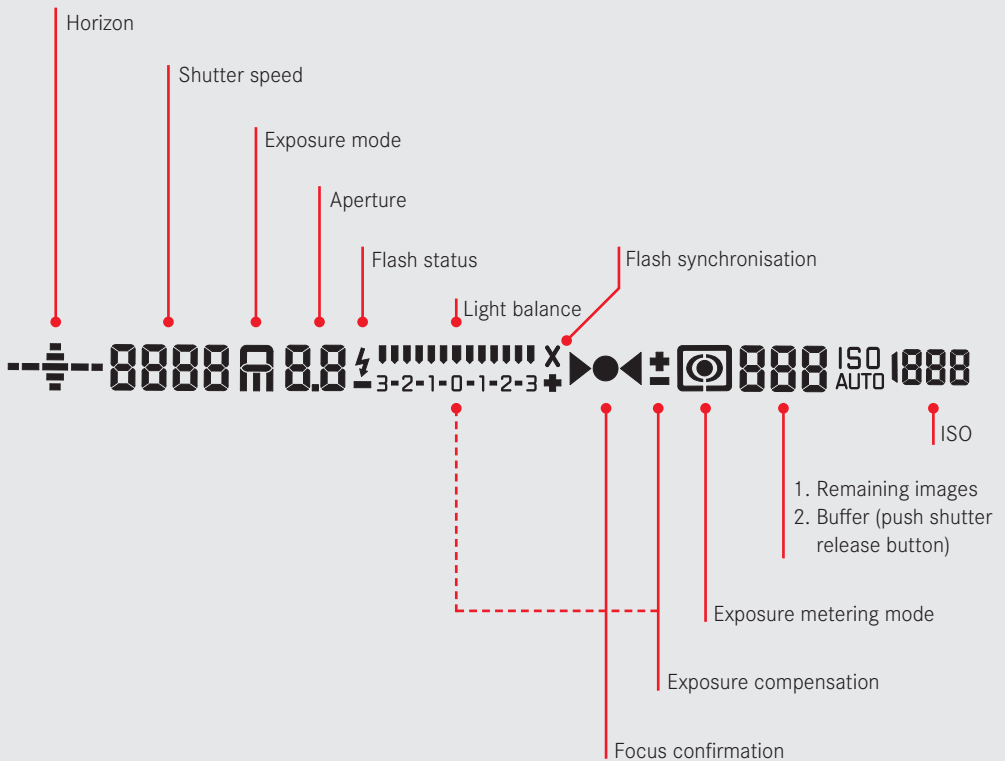 



Exposure mode:

P : Automatic program
A : Aperture priority

 
T : Shutter speed priority
m : Manual exposure

Exp. Metering Mode:



 : Multi-field
 : Center-weighted

 : Spot

STATUS SCREEN

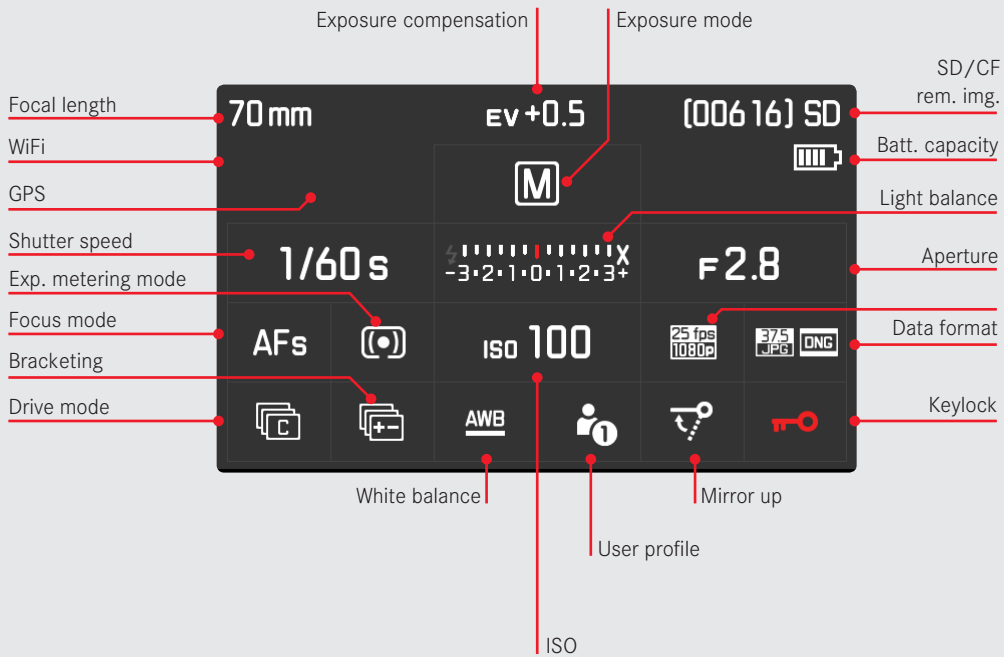


TOP DISPLAY

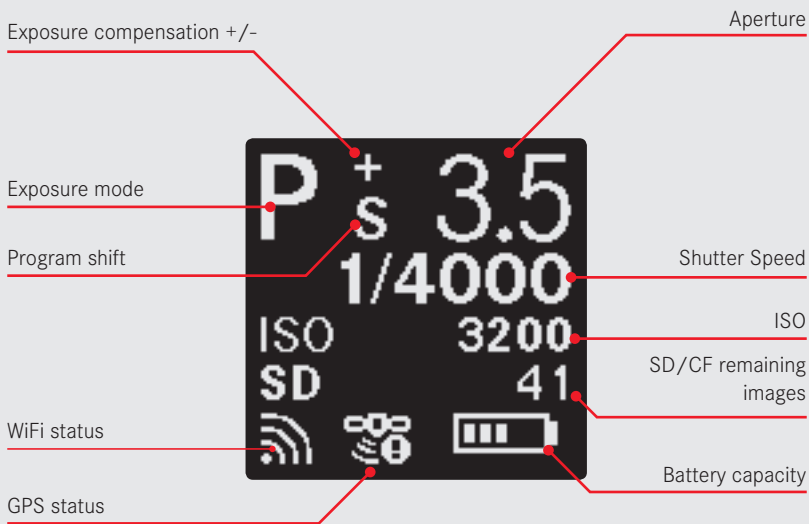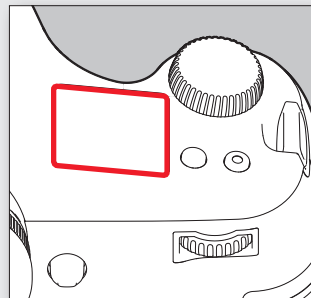  

SWITCH ON CAMERA

Main switch	Shutter speed	Flash sync
FPS (Focal plane shutter)	all	up to 1/125s
CS (Central shutter)	8s to 1/1000s	up to 1/1000s

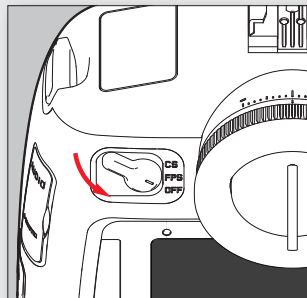 

TIP

 
After booting, the camera will be in Record Mode. Most sequences of this Quick Start Guide will begin in this state.

TAKING PHOTOS / VIDEO RECORDING

Start/Stop
Video recording

Two step Shutter Release

1. Step: AF start / AE activation
2. Step: Release Shutter

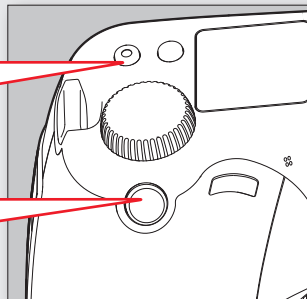

TIP


Press the shutter release button halfway to exit menus and return to Record mode.

VIDEO SETTINGS




	24 fps	25 fps	30 fps	Crop factor
4K (4096 x 2160 px)	●	●	●	(approx. 1.5) ≈ Super 35mm
Full HD (1920 x 1080 px)	●	●	●	Whole sensor width

 VIDEO STORAGE

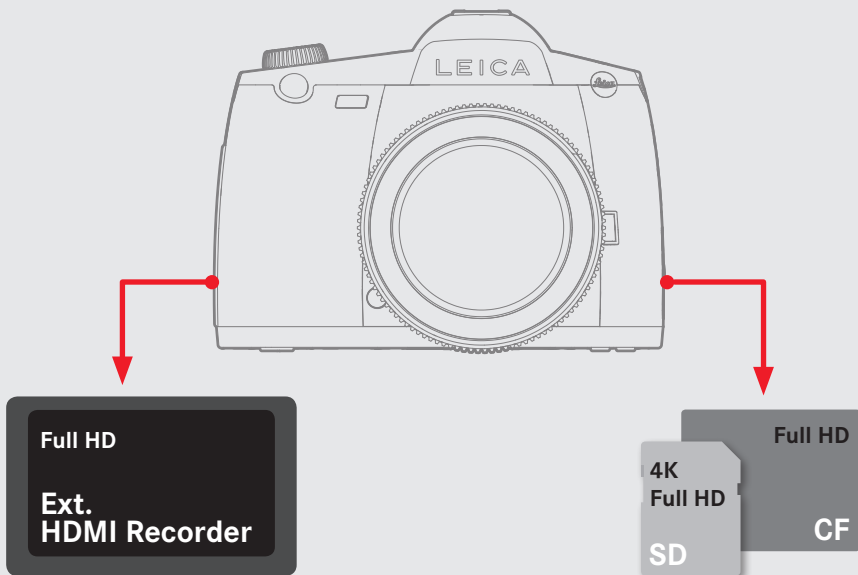


EXTERNAL AUDIO


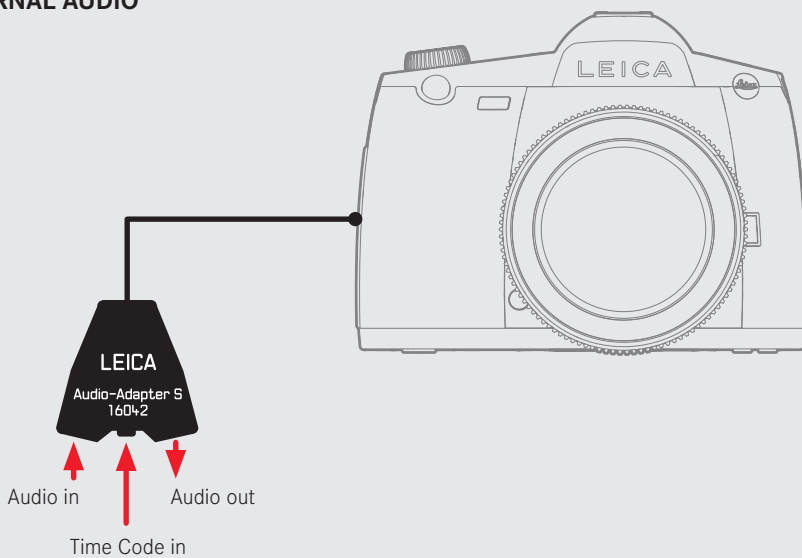 


ENTER STATUS SCREEN & PLAY MODE

 Status Screen

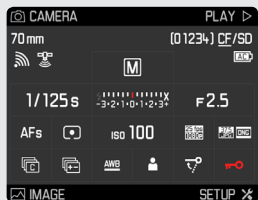


Play Mode

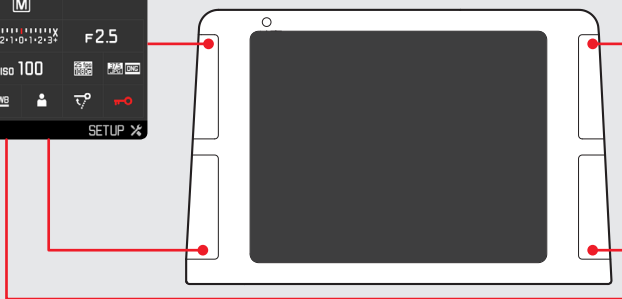 
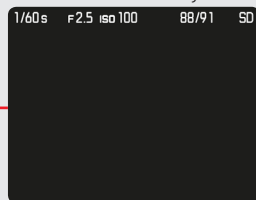 


ENTER MENU & PLAY MODE

 Section CAMERA

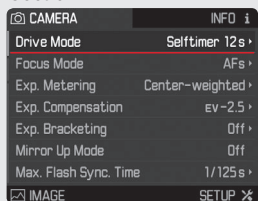


Play Mode

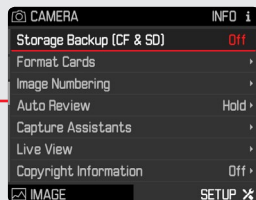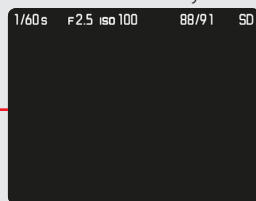  


Section IMAGE

 Section SETUP

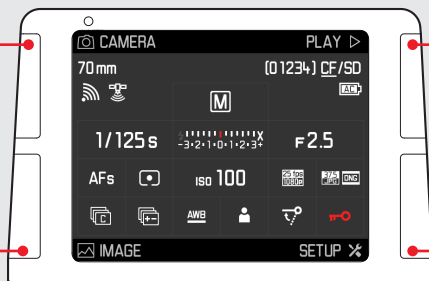

MENU

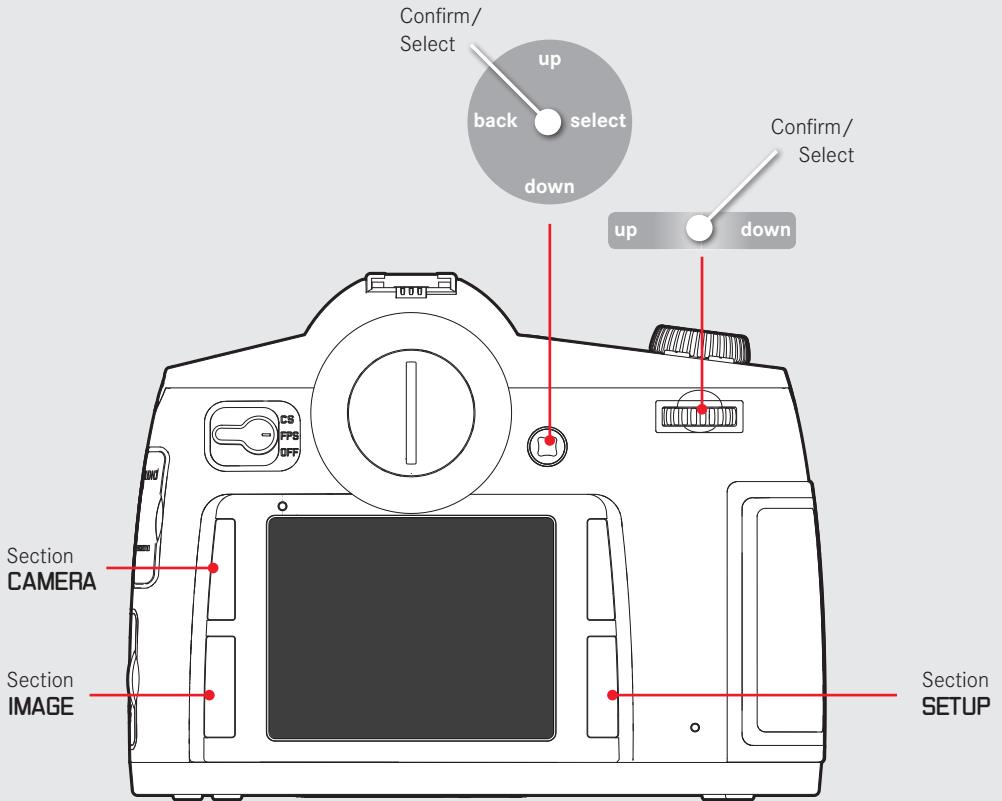 


TIP

Press the shutter release button halfway to exit menus and return to Record Mode.

MENU - QUICK ACCESS / CUSTOMIZE CONTROLS

 Long push (1 sec.) leads you straight to your favorite submenu.

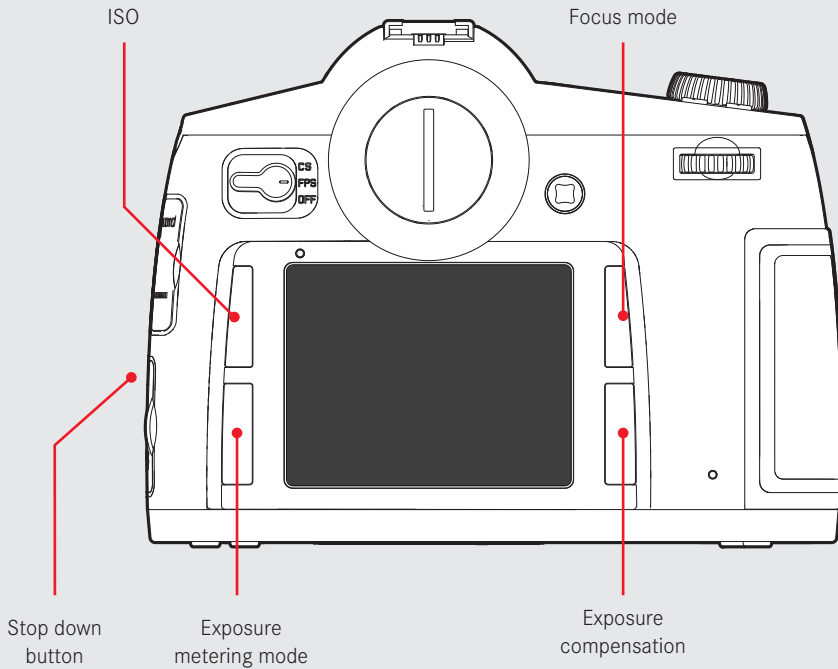


TIP

Setup the buttons to your needs in the menu **Setup/Customize Controls**.



In LiveView the Stop Down button is reserved for activate/deactivate **Exposure Simulation!**

BASIC CAMERA SETUP

 
Language

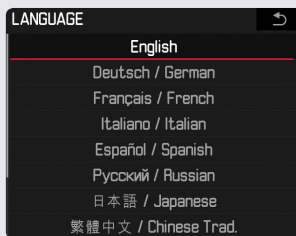

Format Card

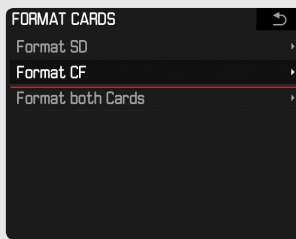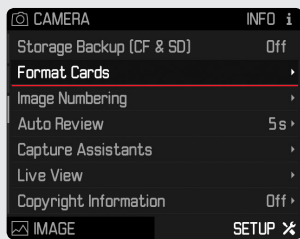  

Storage Backup

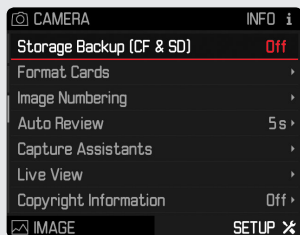 


TIP

If Storage Backup is set, the files will be stored simultaneously either on both memory cards (CF&SD) or while shooting tethered on memory card (CF or SD) and on the PC's harddrive.


File Format




 
PLAY MODE PHOTO

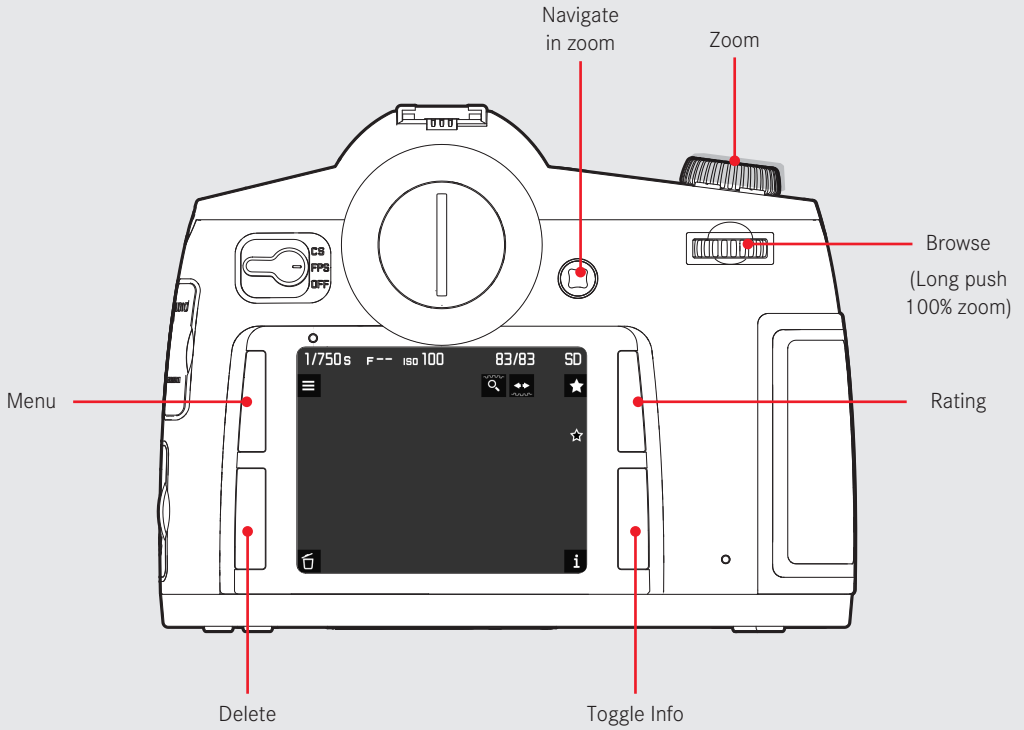

PLAY MODE VIDEO

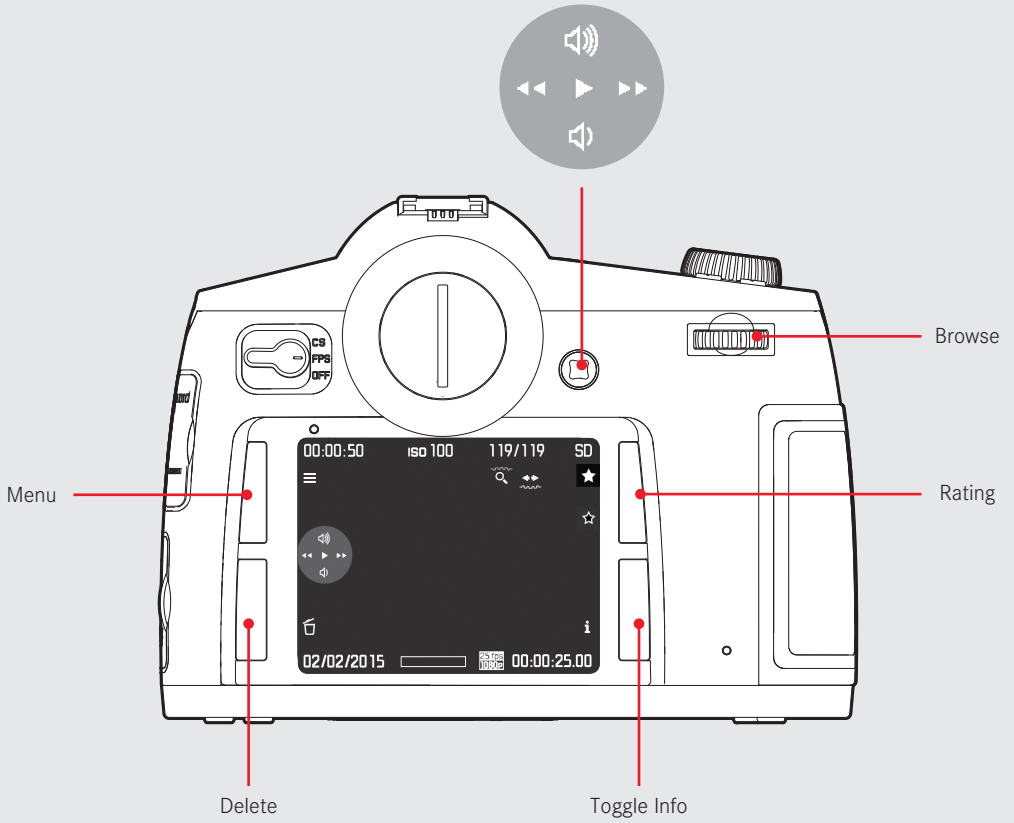 

PLAY MODE INFO SCREENS

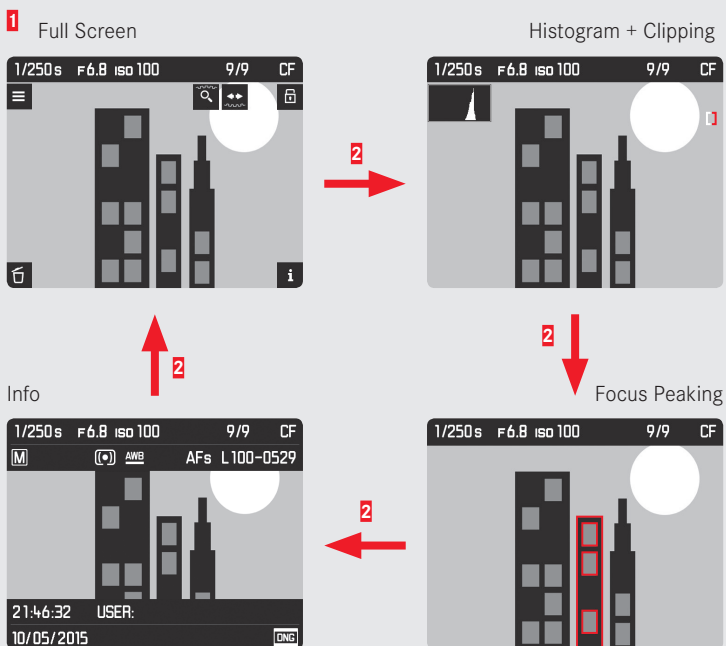 
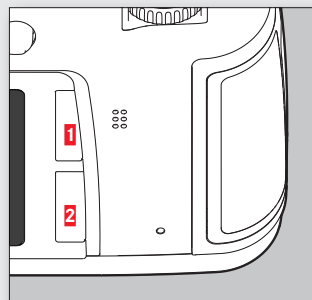 


TIP

Camera always shows the latest mode after coming back to **Play** Mode. Histogram represents the visible area of the image. Customize the clipping settings under menu **Setup/Capture Assistants/Exposure Clipping**.

JH CONTROL MODES


 
 
- long push to access setting
- Turn to switch modes

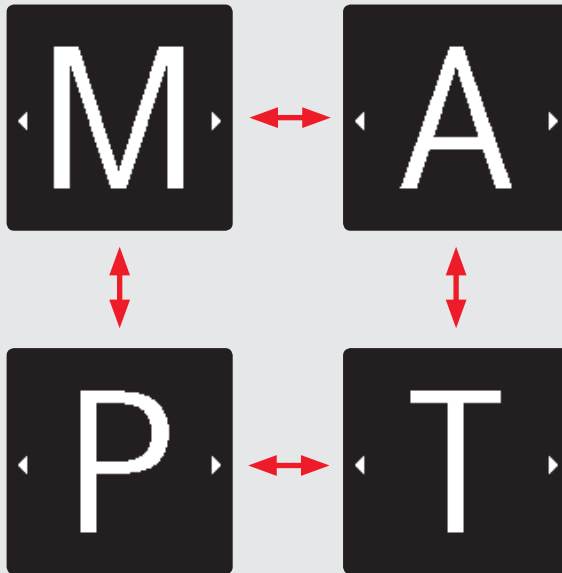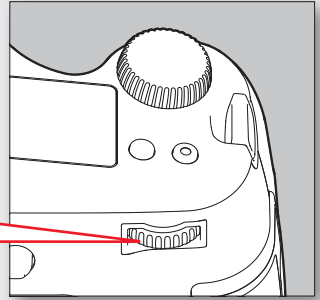

TIP


To exit exposure mode function press one of the soft buttons, the click wheel or shutter button 1st step.

   LIVEVIEW PHOTO

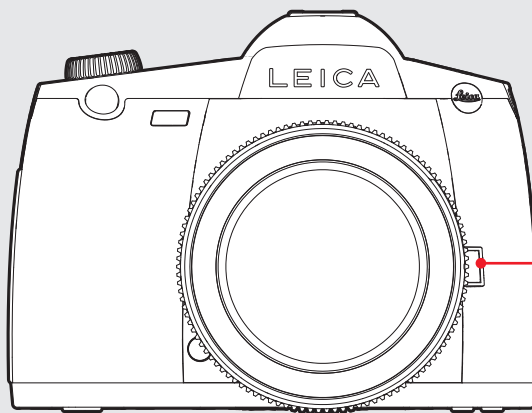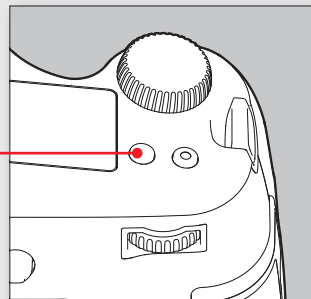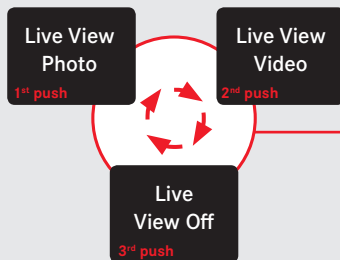


Start/Stop exposure simulation

 
AF/AE lock Shutter
Start AF (in MF mode) speed
Move AF cross

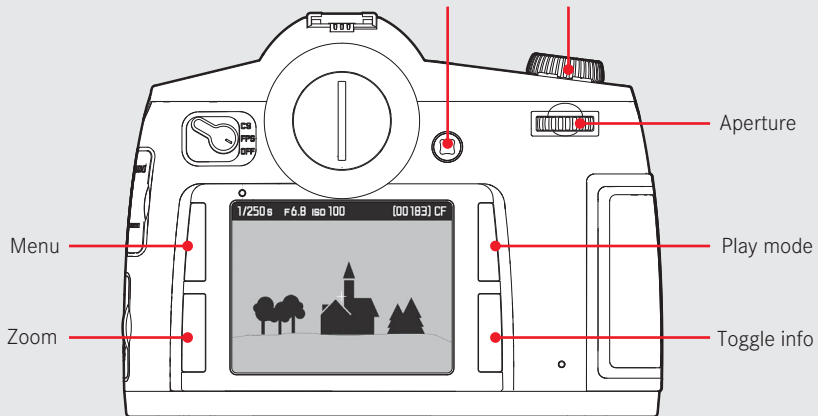


LIVEVIEW PHOTO - SCREENS

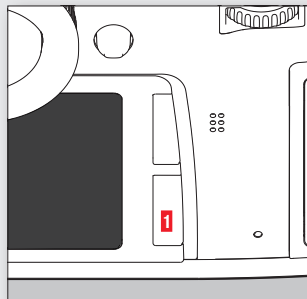 


Full Screen

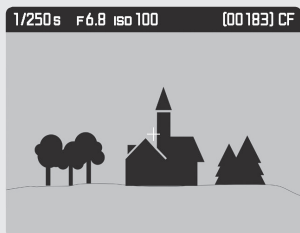 


Histogram + Clipping

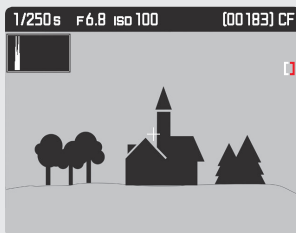 


Info

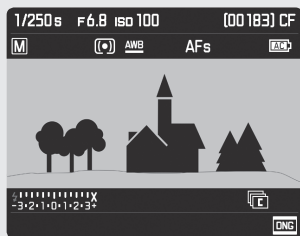 




Focus Peaking

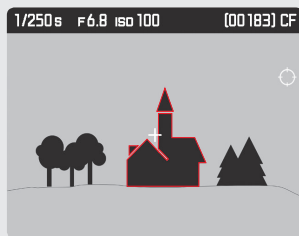 

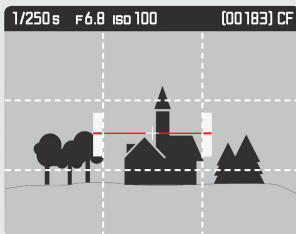 


Grid + Horizon

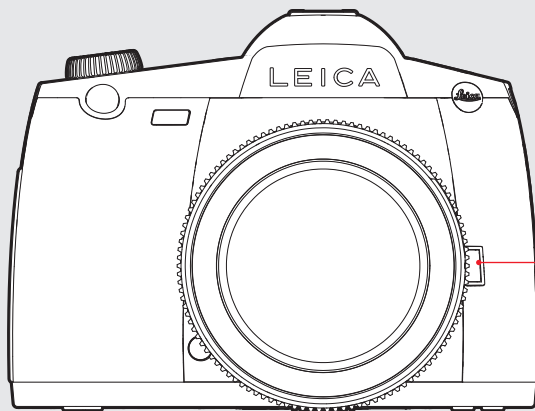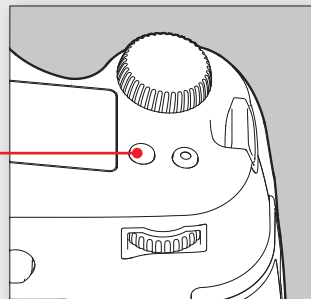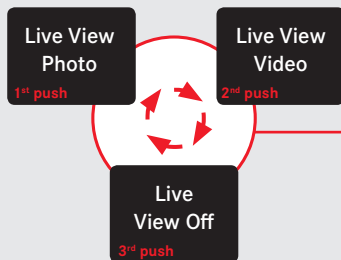   


LIVEVIEW VIDEO



 
-  **Volume**
Hold + Joystick ▶
-  **Volume**
Hold + Joystick ◀▶

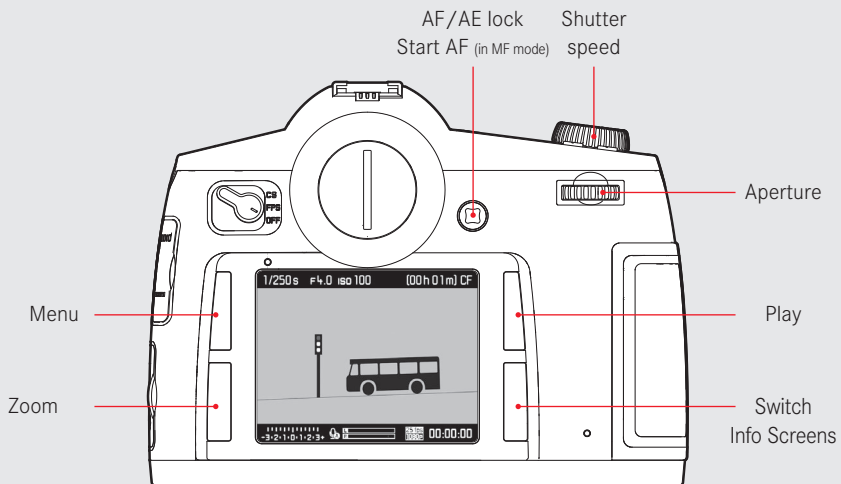


LIVEVIEW VIDEO - SCREENS

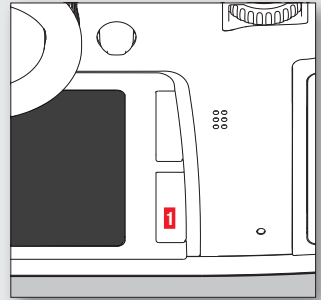 


Full Screen

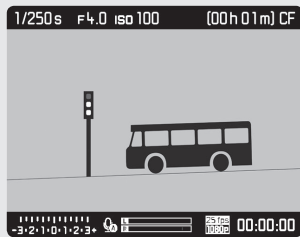 


Histogram + Clipping

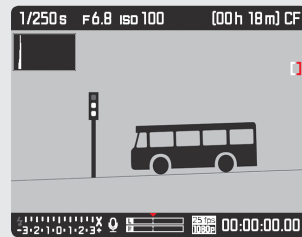 


Info

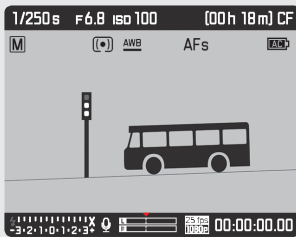 


Focus Peaking

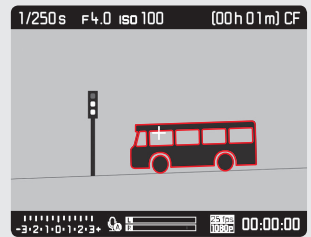 


Grid + Horizon

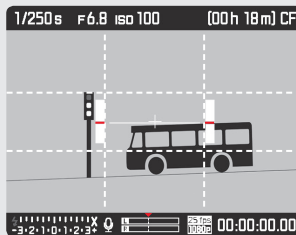 



WLAN SETUP

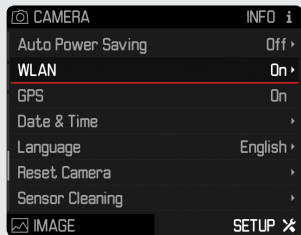 



On/Off

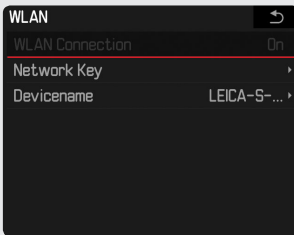 

NETWORK KEY

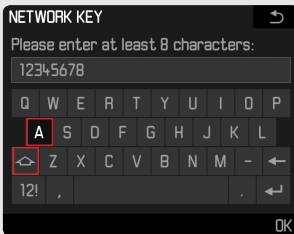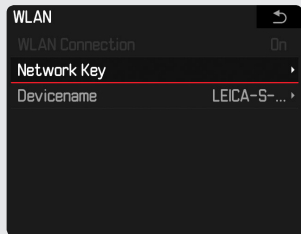  


DEVICENAME

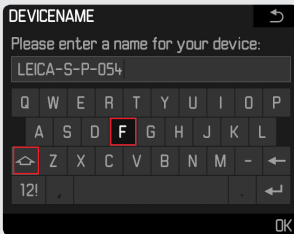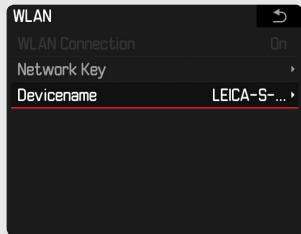  

WLAN CONNECTION TO SMARTPHONE/TABLET

 1. Activate **WiFi** on your iPhone or iPad.
2. Choose your Leica (SSID: **LEICA-S...**) from the Network list.
3. Enter Network Key.
4. Return to the home screen and launch the Leica S app:

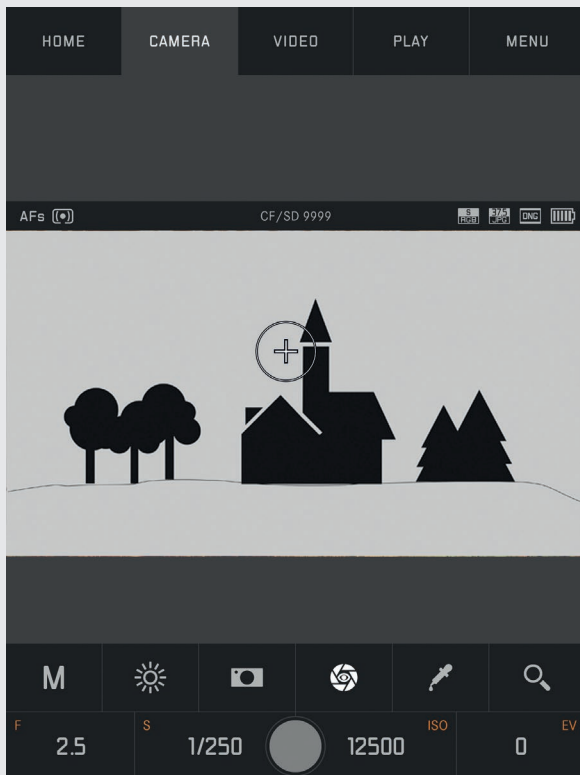

LIGHTROOM TETHERED PLUG-IN

Lightroom Tethered Plug-in is a plug-in for Adobe Photoshop Lightroom, which enables the direct tethered shooting with Adobe Photoshop Lightroom and the Leica S (Typ 007) via USB cable connection.

FEATURES:

- Transfer images for direct control in Adobe Photoshop Lightroom
- Remote control the shutter release
- Display exposure information in Adobe Photoshop Lightroom

SYSTEM REQUIREMENTS:

- Leica S (Typ 007)
- Lemo USB3.0 SuperSpeed cable
- USB3.0 port (recommended for highest speed and stability)
- Adobe Photoshop Lightroom 6.2 or higher respectively CC
- Mac OS X (10.10 or higher)

 
INSTALLATION

1. STEP

Download the file “LeicaTethered.Irplugin” to your hard disk


2. STEP

Start Adobe Photoshop Lightroom 6 / CC

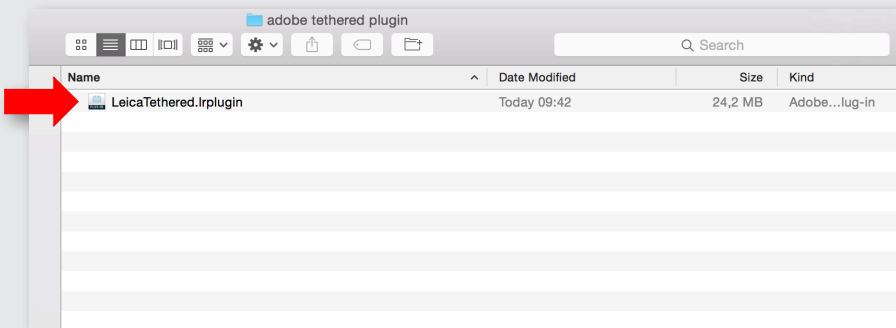



3. STEP

 Start: File/Plug-in Manager

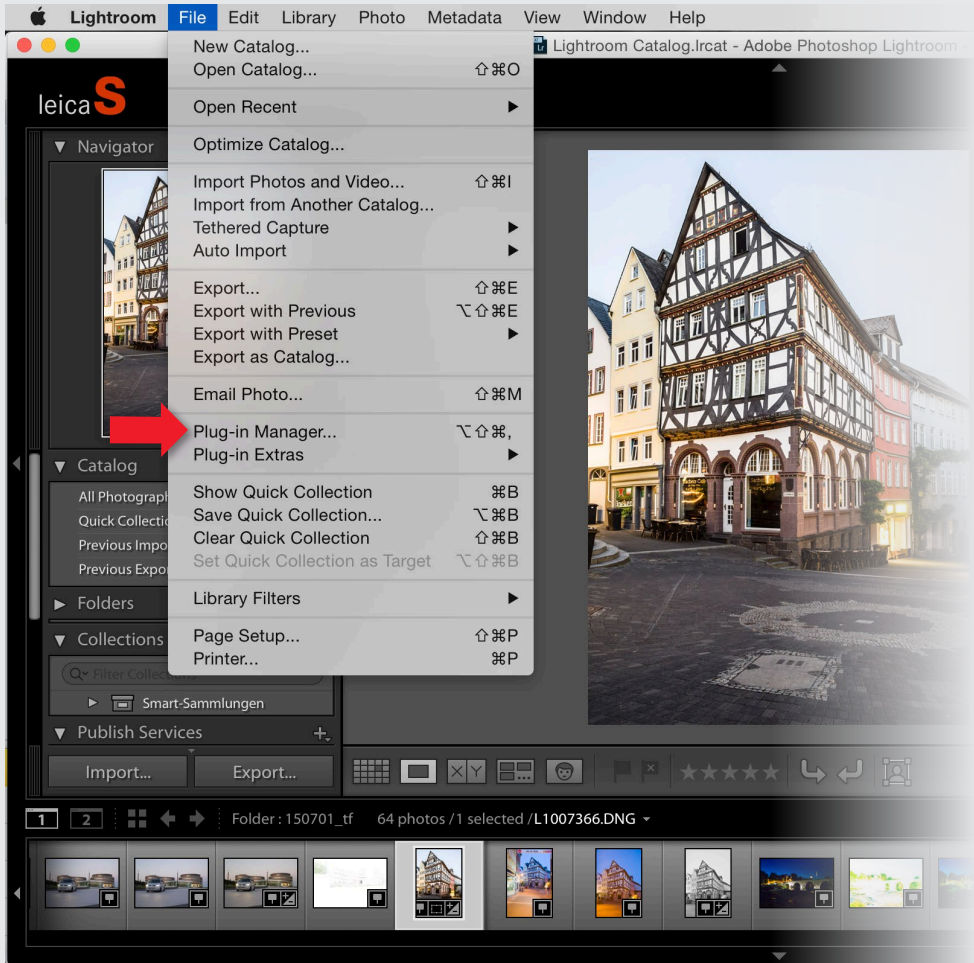


4. STEP

  Add Plug-in

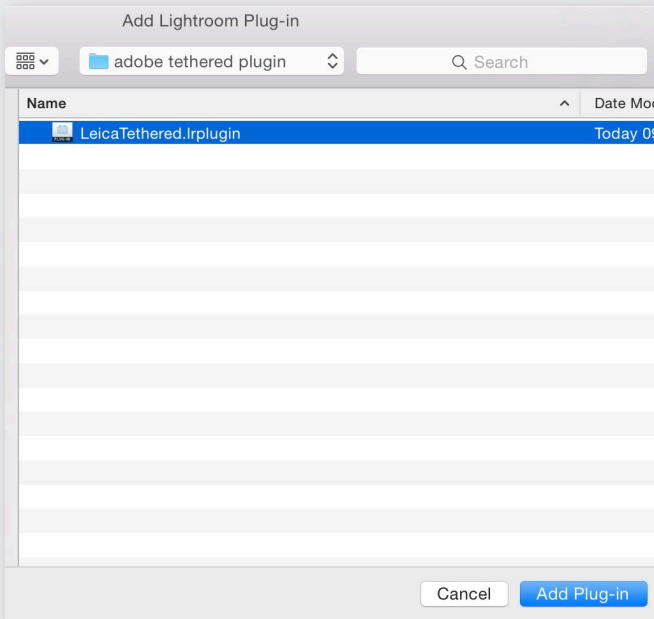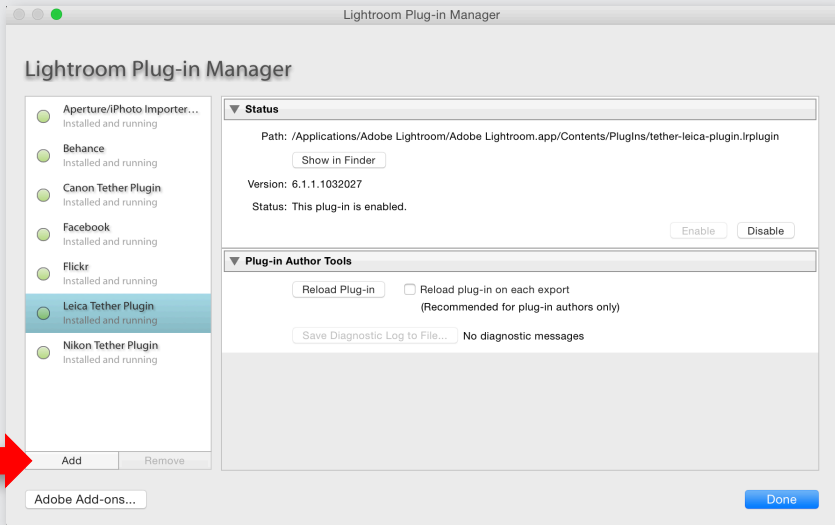


6. STEP

 Check, if Leica Tethered Plug-in is listed and enabled

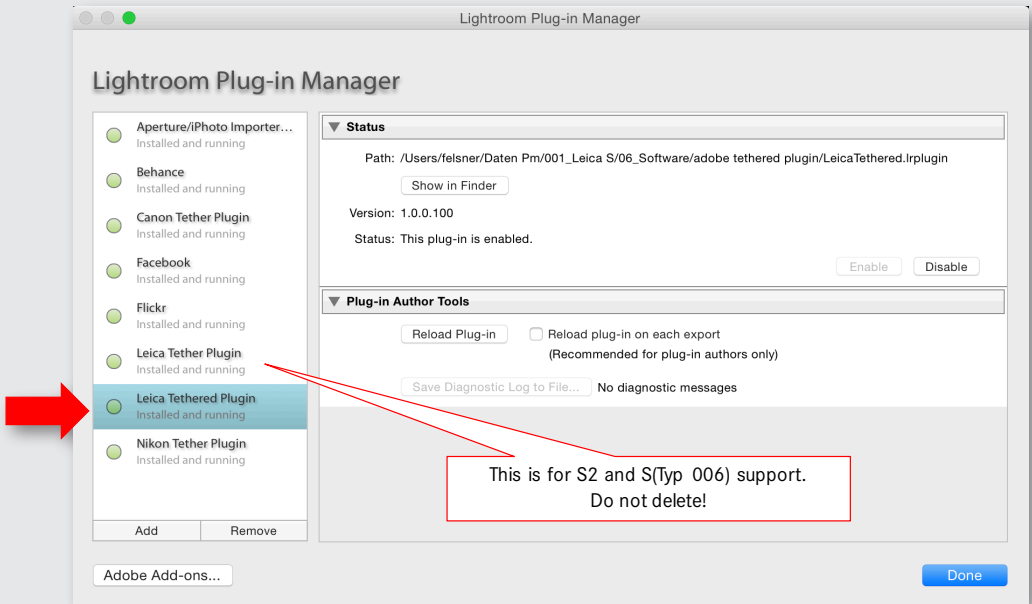

Tethered shooting - Adobe™ Photoshop™ Lightroom™ Workflow

 1. Connect the camera with your computer via USB cable.
2. Switch the camera on.
3. Start Adobe Photoshop Lightroom 6 / CC
4. Setup tethered shooting.

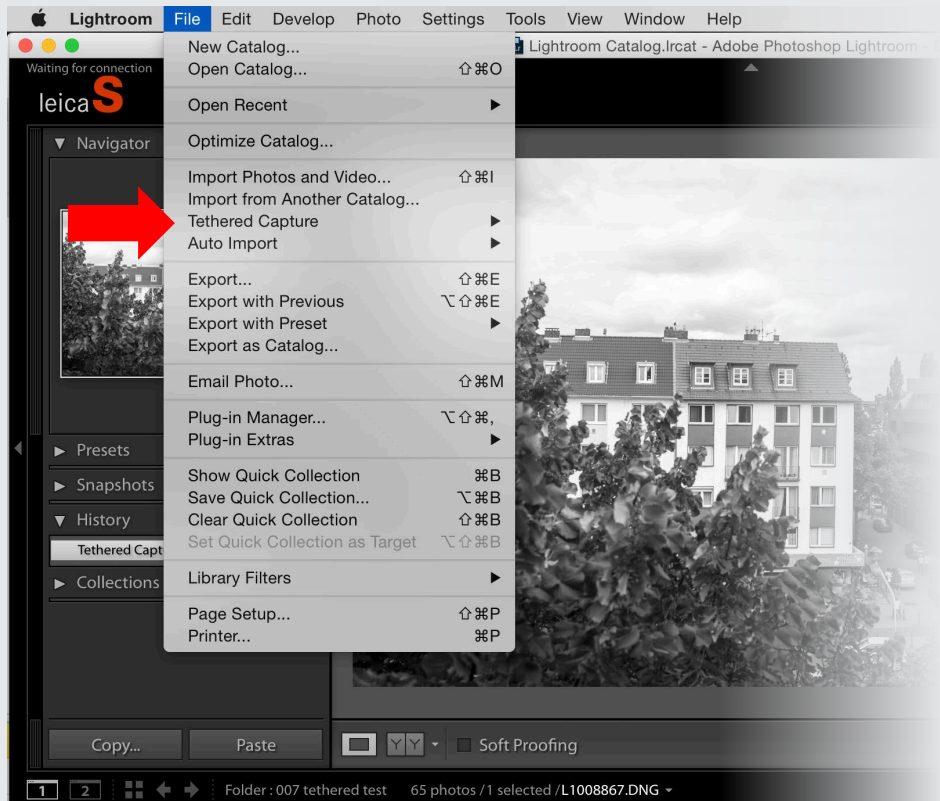

Tethered Capture Settings

Session

Session Name:

Segment Photos By Shots

Naming

Sample: IMG_0001.DNG

Template:

Destination

Location: /Users/felsner/Pictures/007 tethered test

Add to Collection

Information

Metadata:

Keywords:





Lightroom

File

Edit

Develop

Photo

Settings

Tools

View

Window

Help



Lightroom Catalog.lrcat - Adobe

Waiting for connection

leica **S**

▼ Navigator

FIT FILL 1:1 3:1

Leica S [Type 007] ▾

007 tethered test

1 /

f /

ISO

WB :

Develop Sett

250

5.6

100

Auto

Same as p



▶ Presets +

▶ Snapshots +

▼ History ×

Tethered Capture (28/08/15 12:17:19)

▶ Collections +

Copy...

Paste



Soft Proofing

1

2



 
Folder : 007 tethered test

65 photos / 1 selected / L1008867.DNG ▾





Histogram ▾

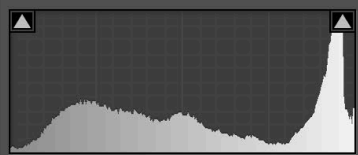

ISO 100 45 mm f / 5,7 1/250 sec

Original Photo



Basic ▾

Treatment: Color | **Black & White**

WB: Custom ▾

Temp: 5.250

Tint: +18

Tone: Auto

Exposure: -0,30

Contrast: -1

Highlights: -41

Shadows: +41

Whites: +30

Blacks: -42

 
Previous Reset

Filter: Filters Off




TETHERED SHOOTING - LEICA IMAGE SHUTTLE™ WORKFLOW

1. Connect the camera with your computer via USB cable (PTP storage mode).
2. Switch the camera on.
3. Start Leica Image Shuttle™.
4. Setup tethered shooting.

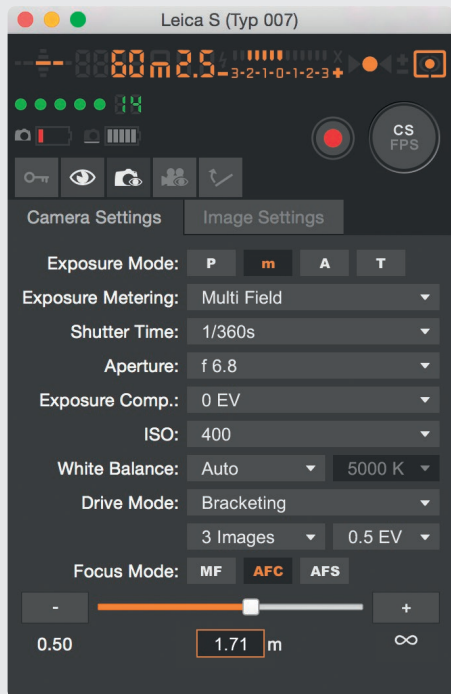


Remote Screen

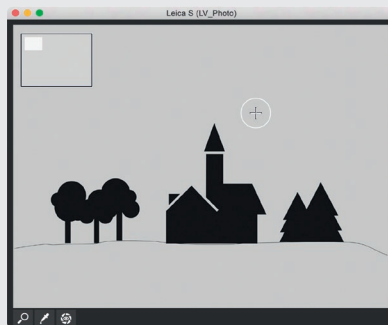 

Liveview Photo



 Liveview Video

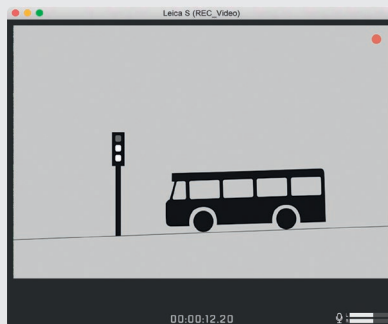




Recording Video

TIP

You can also use Leica Image Shuttle in combination with Adobe Bridge or with the hotfolder function of Adobe Photoshop Lightroom or any other software supporting hotfolder.

MENU LIST

 CAMERA	Drive Mode
	Focus Mode
	Exp. Metering
	Exp. Compensation
	Exp. Bracketing
	Mirror Up Mode
	Max. Flash Sync. Time
 IMAGE	ISO
	White Balance
	Photo File Format
	JPG Resolution
	Photo Settings
	Video Resolution
Video Setting	
 SETUP	Storage Backup (CF & SD)
	Format Cards
	Image Numbering
	Auto Review
	Capture Assistants
	Copyright Information
	User Profiles
	Auto ISO Setup
	Flash Sync. Mode
	Keylock
	Customize Controls
	Display Brightness
	Acoustic Signals
	Auto Power Saving
	WLAN
	GPS
	Date & Time
	Language
	Reset Camera
	Sensor Cleaning
Camera Information	



my point of view

Leica Camera AG | Am Leitz-Park 5 | 35578 Wetzlar | DEUTSCHLAND
Telefon +49(0)6441-2080-0 | Telefax +49(0)6441-2080-333 | www.leica-camera.com