Quick-Start

Leica TL

Flash

Attach Accessories
(Flash/Viewfinder)

Picture

Movie

OFF / ON / ⚡

Battery

Microphone

Soft Dial 1

Soft Dial 2

SD Card Slot

USB Port

Touch Display
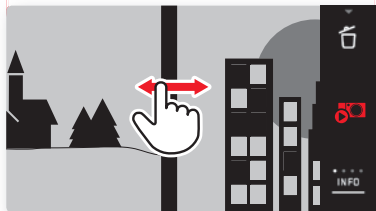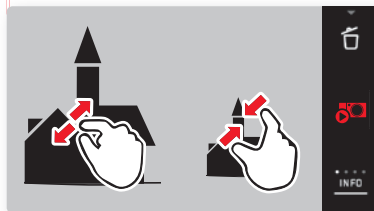
LIVE-VIEW & PLAY MODE

Live-View

Play Mode
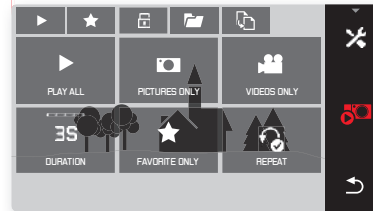
Swipe ◄► to browse images in Play mode

1. Enlarge Unpinch or double tap

2. Reduce Pinch or double tap

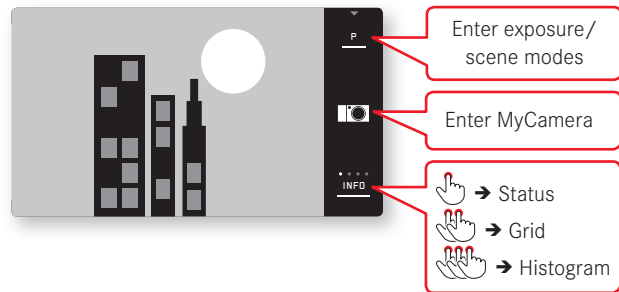▶ Slide show
🔒 Protect
🗐 Copy data

★ Mark as favorite
🗀 Select memory for Play mode

PLAY ALL

PICTURES ONLY

VIDEOS ONLY

DURATION

FAVORITE ONLY

REPEAT

INFO

MENU

Start Screen

Enter exposure/
scene modes

Enter MyCamera

👆 ➔ Status
✌️ ➔ Grid
🖐 ➔ Histogram

MyCamera Menu

AUTO ISO	AWB WHITE BALANCE	±0 EXPOSURE COMPENSATION
JPG FILE FORMAT	16M JPG RESOLUTION	⚡ FLASH MODE
SELFTIMER	WiFi	+

Enter
camera settings

Browse menus

400 ISO	AWB WHITE BALANCE	±0 EXPOSURE COMPENSATION
DRIVE MODE SINGLE	MULTI-FIELD METERING	SELFTIMER
_PG superfine FILE FORMAT	AF FOCUS MODE	⚡ FLASH MODE
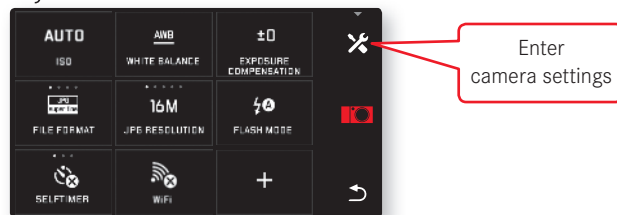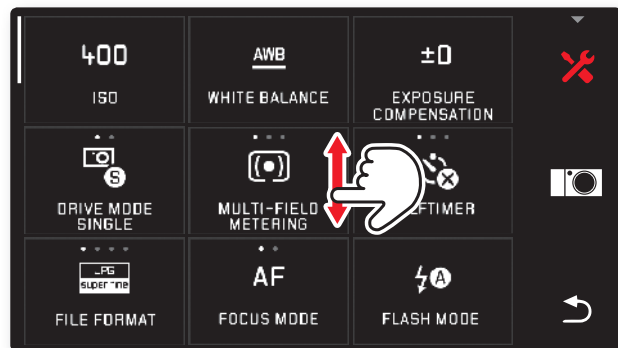
Touch to enter function / change settings
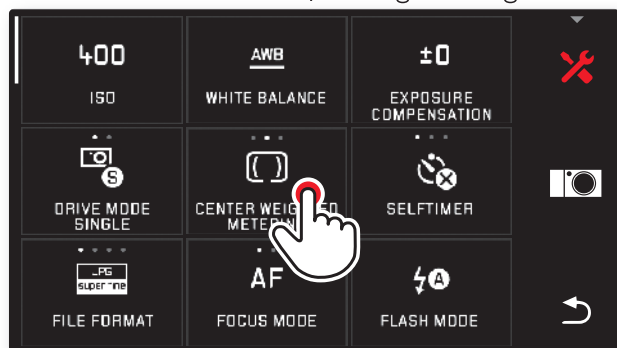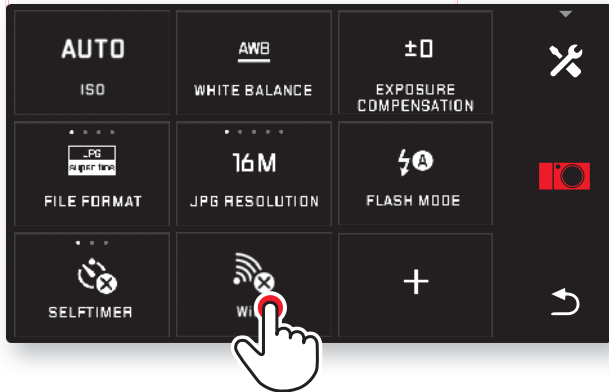
400 ISO	AWB WHITE BALANCE	±0 EXPOSURE COMPENSATION
DRIVE MODE SINGLE	CENTER WEIGHTED METERING	SELFTIMER
_PG superfine FILE FORMAT	AF FOCUS MODE	⚡ FLASH MODE

WLAN

AUTO ISO	**AWB** WHITE BALANCE	**±0** EXPOSURE COMPENSATION	✖
.JPG super fine FILE FORMAT	**16M** JPG RESOLUTION	**⚡🅰** FLASH MODE	📷
⏱✖ SELFTIMER	**📶✖** Wi...	**+**	↩

WiFi

WLAN   ■ ON   ☐ OFF

Do you want to con...
directly to your m...
device or via a rout...

DIRECT   ■

ROUTER

OK ↩

4. Choose

Web Gallery	See your Images in Webbrowser on any device
APP Connection	Conncet to App on your Smart-Device

WiFi ▸

SET

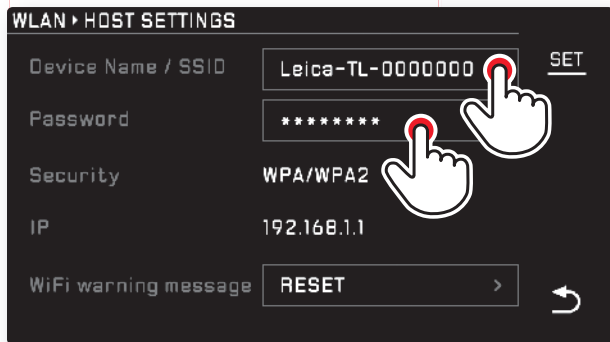Web Gallery
IP   192.168.1.1

APP Connection
Searching for APP

OK
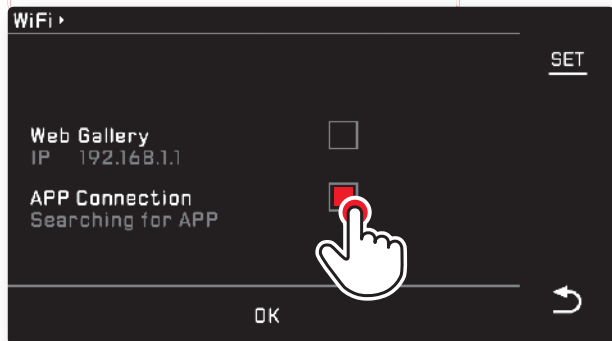
5. Connect

- Select your Leica TL in WiFi section of your Smart-Device
- Enter **SSID** and **Password** on your Smart-Device as shown

WiFi ▸ ACCESS POINT
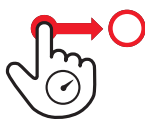
Connect your mobile device
to this WiFi network:

SSID
Leica-TL-0000000

Password
00069930

CANCEL

WLAN ▸ HOST SETTINGS

Device Name / SSID	Leica-TL-0000000	SET
Password	********	
Security	WPA/WPA2	
IP	192.168.1.1	
WiFi warning message	RESET ❯	↩

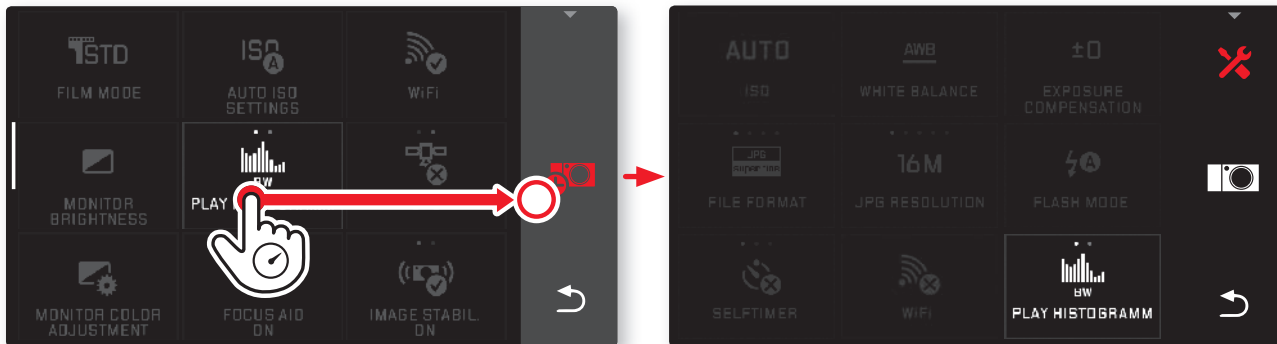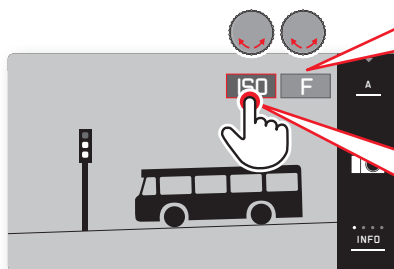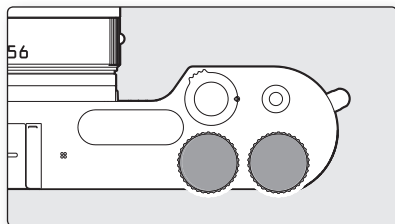|					
tap	**double tap**	**long press, drag & drop**	**swipe**	**reduce**	**enlarge**

PERSONALIZE MYCAMERA-MENU

PERSONALIZE SOFT DIALS

Change aperture value in Aperture Priority mode (__A__)
or
Change shutter speed in Shutter Priority mode (__S__)

Select function