



RANGEMASTER 3500.COM
Instruction manual

FOREWORD

Dear customer,
we wish you a great deal of enjoyment and every success with your new Leica product.

Please read this manual to familiarize yourself with the full scope of functions your product has to offer.

Please use this product only as described in this manual. Only then can safe and easy operation be guaranteed.

Your Leica Camera AG

The device uses an invisible laser beam. Please read the chapters “Safety Remarks” and “Important Information” before using the product for the first time. Knowledge of the content will prevent inadvertent damage to the product, possible injuries and other risks.

SCOPE OF DELIVERY

The standard scope of delivery* contains the following:

- Leica Rangemaster
- 3 V lithium cell (type CR2)
- Carry strap
- Cordura case
- Quick Start Guide
- Test certificate

REPLACEMENT PARTS/ACCESSORIES

Contact Leica Customer Care or your specialist Leica retailer for details on the latest spare parts/accessory range:

<https://en.leica-camera.com/Stores-Dealers/Leica-dealer-locator>

*The actual scope of delivery may vary depending on model.

LEGAL INFORMATION

REGULATORY INFORMATION

You will find the manufacturing date of your product on the stickers on the packaging. The date format is year/month/day.

This product is manufactured under license by Leupold & Stevens, Inc.

CE MARK

The CE mark on our products documents compliance with the fundamental requirements of applicable EU guidelines.

English		
Declaration of Conformity (DoC)		
Leica Camera AG herewith confirms that this product complies with basic requirements and other relevant standards included in the directive 2014/53/EU.		
Customers can download a copy of the original DoC regarding our RF products from our DoC server here: www.cert.leica-camera.com		
Please contact The Leica Camera AG Product Support in case of any further questions: Am Leitz-Park 5, 35578 Wetzlar, Germany		
Depending on product (see technical data)		
Type	Frequency range (center frequency)	Max. output (dBm E.I.R.P.)
WLAN	2412–2462/5180–5240 MHz/	20
	5260–5320/5500–5700 MHz	
Bluetooth® Wireless Technology	2402–2480 MHz	20

TECHNICAL DATA (LASER)

Laser class	IEC/EN Class 3R
Wavelength (nm)	905
Pulse duration (ns)	60
Output (W)	<7,5
Beam divergence (mrad)	Vertical: 1.28 Horizontal: 0.85



With the exception of the characteristics permitted under Variance Number IEC 60825-1 Ed. 3, effective May 8, 2019, this product complies with the performance standards for laser products under 21 CFR 1040.10 and 1040.11.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

(Applies within the EU and for other European countries with segregated waste collection systems.)



This device contains electric and/or electronic components which must not be disposed of in general household waste! Instead, it should be disposed of at a recycling collection point provided by your local authority.

This service is free of charge. Any standard or rechargeable batteries used in this device must be removed and disposed of separately in accordance with local regulations.

Please contact your local authorities, waste disposal collection point or the retailer, from whom you purchased the device for more information on correct waste disposal.

SAFETY REMARKS

WARNING

Non-compliance with the following points may result in serious injury or death.

LASER

- The use of any operations not described in this manual or any alterations on the device may result in hazardous radiation exposure.
- The laser device is active and emitting an invisible laser beam as long as the display in the eyepiece is active. Never point the laser focusing optics at a person or animal.
- Do not depress any of the two buttons while aiming at a human eye or while looking into the optics from the lens side.
- Never aim the laser at an eye.
- Do not aim the laser at people or animals.

GENERAL INFORMATION

- Avoid looking directly at bright light sources with your Leica Rangemaster to prevent eye injury.

CAUTION

Non-compliance with the following points may result in personal injury or damage to the device.

LASER

- Avoid touching any of the two buttons while the distance measurement function is not in use to prevent an accidental activation of the laser beam.
- Do not attempt to disassemble, reassemble or repair the Leica Rangemaster yourself. Emitting laser radiation may pose a serious health risk. The manufacturer warranty is void, once a device was disassembled, reassembled or repaired.
- Remove the battery immediately and stop using the device if the device housing is damaged or if it emits a strange sound after being dropped or behaves unexpectedly for any other reason.

GENERAL INFORMATION

- Keep the device out of the reach of small children.
- Do not use the device while walking! You might trip and fall.
- Do not combine the operation of your Leica Rangemaster with other optical components, e.g. lenses or binoculars. Using the Leica Rangemaster in conjunction with another optical device increases the danger of damaging your eyes.
- Do not attempt to disassemble or modify the device; exposing the internal electronics may cause damage, injury or electric shock.

BATTERY

- Only the battery type stated and described in this manual must be used. Any improper use of the batteries or the use of unapproved battery types may result in an explosion!
- Do not expose the battery to sunlight, heat, humidity or moisture for prolonged periods of time. It must not be placed in a microwave oven or a high-pressure container as this would pose a fire or explosion hazard!
- Never dispose of batteries in fire and never attempt to heat, recharge, dismantle or break open a battery.
- Batteries must always be stored out of the reach of children. Do not leave batteries lying around, as they could be swallowed by children or pets.

CARRY STRAP

- Carry straps are usually made of very robust material. You should therefore keep it out of the reach of children. A carry strap is not a toy and poses a strangulation risk.
- Use the carry strap only for its intended purpose on a camera or on binoculars. Any other use poses the risk of injury and may possibly result in damage to the carry strap and is therefore not permitted.
- Carry straps should also not be used for cameras/binoculars during sports activities that pose a risk of entanglement (e.g. when mountain climbing and similar outdoor activities).

IMPORTANT INFORMATION

GENERAL INFORMATION

- Do not attempt to take the device apart yourself. Repairs must only be carried out in authorized workshops.
- Remove the battery from the housing if you will not be using the product for an extended period of time.
- Low temperatures impair battery performance. Carry the range-finder close to the body in low ambient temperatures and insert a fresh battery.
- Make sure to store the batteries in a cool, dry place.
- Depleted batteries must never be disposed of in household waste as they contain toxic materials that are harmful to the environment. Battery collection points are provided at most large retail outlets; alternatively, you can dispose of old batteries at a local special waste collection point to ensure correct recycling.
- Do not touch the glass surfaces with your fingers, especially if you have previously applied hand cream, insect repellent, etc. These substances may contain chemicals that damage or destroy the coatings on the glass surfaces.

MEASURING VALUES

- The influence of all ballistically relevant influencing factors is greatly increased at longer ranges and considerable variations may occur. The ballistic values displayed should therefore only be viewed as a guideline.
- Regardless of whether this information is used, you are responsible for assessing the relevant hunting situation.
- Leica Camera AG does not accept liability for the accuracy of values transmitted from third-party devices.
- Powerful electric fields, e.g. emanating from radar systems, may cause errors and/or faulty values.
- The geomagnetic field can similarly cause value deviations.

WARRANTY

In addition to your statutory warranty rights from your dealer, Leica Camera AG offers a 2-year warranty for this Leica product in accordance with the conditions stated below. The Leica warranty does not impact on any statutory consumer rights in accordance with relevant national law or any consumer rights vis-à-vis the retailer arising from the purchase contract concluded between them.

Please note different warranty regulations for the USA at the following link: [leicacamerausa.com/sport-optics-warranty](https://www.leicacamerausa.com/sport-optics-warranty)

WARRANTY CONDITIONS

By purchasing this Leica accessory, you have acquired a rangefinder that is manufactured in compliance with special quality standards, and which was thoroughly tested at each individual production step by experienced specialists. We offer a two-year warranty for this product from the date of sale by an authorized dealer under the following conditions:

1. Any claims related to manufacturing defects during the warranty period will be remedied free of charge at our discretion by repairing the defect, replacing defective parts or by replacing the faulty product with a product of perfect function. All other claims of any kind and on whatever legal basis shall not be accepted in connection with this warranty.
2. Wear parts like eyecups, leather details, armoring, carry straps and accessories are exempt from the warranty. The same applies for surface damage.
3. Any warranty claims become void if the defect in question is a result of improper handling – which also includes the use of third-party accessories – or if the product was manipulated by unauthorized persons or workshops or if the serial number of the product was rendered illegible.

4. Warranty claims can be submitted only in conjunction with the original proof of purchase – complete with the date of purchase, as well as the address and signature of an authorized retailer.
5. In case of a warranty claim, please send the Leica product, the original proof of purchase and a description of the fault to Leica Camera AG Customer Care or a Leica regional subsidiary.

PICK-UP SERVICE FOR REPAIR SUBMISSIONS

(Applies for EU only)

We will organize the shipping of your device to our Customer Care department if you should notice a problem with your device during the warranty period. Please contact our service hotline to make the necessary arrangements (+49 (0)6441 2080 189). Our pick-up service will collect your Leica product at the agreed time from your premises free of charge and transport it to our Customer Care location for evaluation.

Contact:

[en.leica-camera.com/Contact](https://www.en.leica-camera.com/Contact)

TABLE OF CONTENT

FOREWORD	2	METERING RANGE/ACCURACY	18
SCOPE OF DELIVERY	2	DISPLAYING ATMOSPHERIC CONDITIONS	19
REPLACEMENT PARTS/ACCESSORIES	2	BALLISTICS.....	20
LEGAL INFORMATION	3	DETERMINING THE BALLISTIC CURVE.....	20
REGULATORY INFORMATION	3	SETTING THE BALLISTIC CURVE.....	21
SAFETY REMARKS	4	OUTPUT FORMATS (RbC).....	21
WARNING	4	EQUIVALENT HORIZONTAL RANGE (EHr)	22
CAUTION	5	HOLDOVER (HOLd).....	22
IMPORTANT INFORMATION.....	6	IMPACT POINT CORRECTION	23
WARRANTY.....	7	KESTREL CORRECTION VALUES (LFr).....	23
TABLE OF CONTENT	8	LEICA HUNTING APP	24
PART DESIGNATIONS	10	CONNECTION.....	24
PREPARATION	12	REMOTE CONTROL	25
ATTACHING THE CARRY STRAP	12	FIRMWARE UPDATES	25
INSERTING/CHANGING THE BATTERY.....	12	CARE/CLEANING	25
SETTING THE EYECUP.....	13	TECHNICAL DATA.....	26
DIOPTER SETTINGS	13	LEICA CUSTOMER CARE.....	27
SETTINGS AND OPERATION.....	14	APPENDIX.....	28
ACTIVATING THE RANGEFINDER.....	14		
MENU CONTROL.....	14		
MENU OVERVIEW	15		
SETTING THE DISPLAY BRIGHTNESS	16		
SETTING THE ZEROING DISTANCE.....	16		
METERING OPERATION	17		
DISTANCE MEASUREMENT MADE EASY	17		
SCAN MODE.....	17		

Definition of the various categories of information found in this manual**Note**

- Additional Information


Caution

- Non-compliance may result in damage to the device and accessories
- Non-compliance may result in personal injury

Warning

- Non-compliance may result in serious injury or death

PART DESIGNATIONS

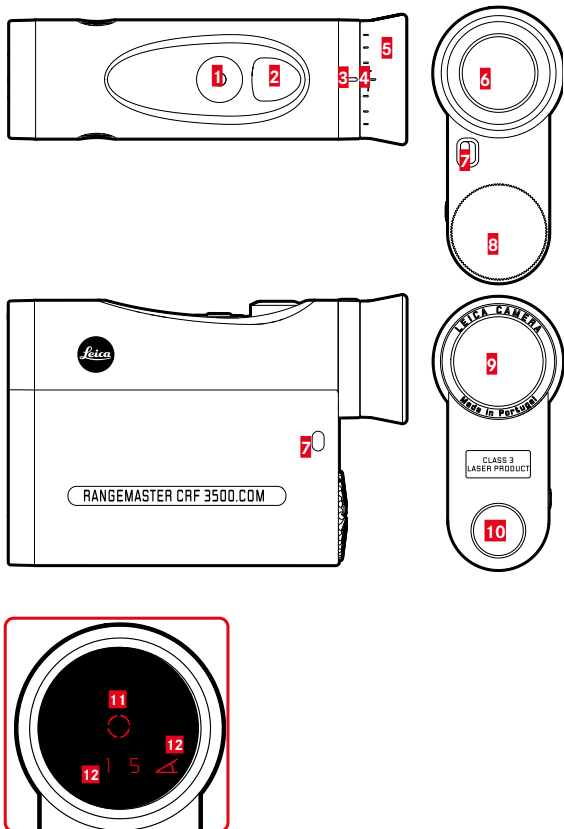**1 Menu Selection Button**

ELUS (meter/yard display), **bt** (Bluetooth), **bALL** (ballistic curve), **Sd** (zeroing distance), **AbC** (ballistic output formats), **brtn** (display brightness)

2 Main switch

Activation and deactivation of the rangefinder

3 Index for diopter setting**4 Diopter scale****5 Eyecups (rotating)**

Use without eye glasses: turn in counter-clockwise direction

6 Eyepiece**7 Strap lugs****8 Battery compartment**

3 V lithium cell (type CR2)

9 Lens**10 Laser transmission lens****11 Target mark****12 Display**

0 **0** (value)/**bALL** (menu item)/**M**, **Y** (unit of measure)/**bt** (Bluetooth)/**∠** (inclination)

Caution


Never look directly at the sun or other bright sources of light through your Leica optics! Doing so may seriously damage your eyes!

Warning

Make sure the weapon is not loaded before doing any work or changing settings on the rifle scope and before changing batteries.

PREPARATION

ATTACHING THE CARRY STRAP

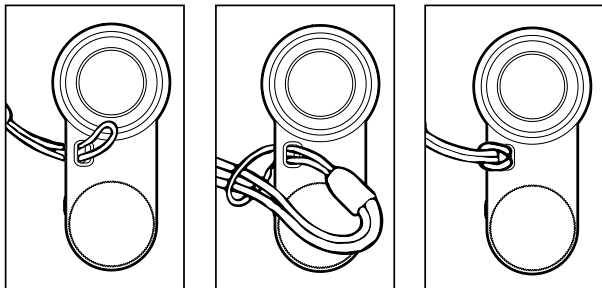


- ▶ Thread the small loop of the carry strap through the strap lug
- ▶ Thread the strap through the small loop
- ▶ Pull tight
 - The loop created should lie tightly around the strap lug.

Caution

- Check the correct attachment of the carry strap by pulling at it with some force. The length of the carry strap must not change.

INSERTING/CHANGING THE BATTERY

A cylindrical 3 V lithium cell (type CR 2) is required for power supply.

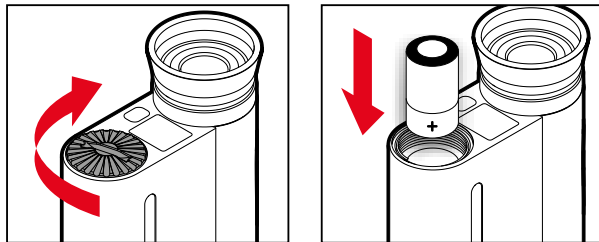


- ▶ Turn the lid over the battery compartment in anti-clockwise direction
- ▶ Remove the lid
- ▶ Insert the battery with the plus contact first
- ▶ Attach the lid
- ▶ Tighten the lid by turning it in clock-wise direction

BATTERY CHARGE LEVEL

The measured value and reticule display will flash when the battery nears depletion. You will still have enough power for another 50 measurements – but with a gradually reducing range – once the display begins flashing.

SETTING THE EYECUP

The position of the eyecups will depend on whether you wear eyeglasses or not. Contact lens wearers can make the settings just like anyone not wearing any eyeglasses.

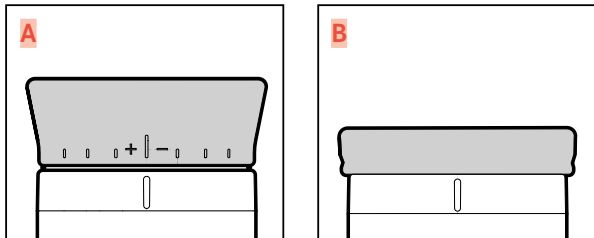

FOR USE WITHOUT EYE GLASSES


- ▶ Fold eyecup out (Fig. A)

FOR USE WITH EYE GLASSES

- ▶ Fold eyecup down (Fig. B)

DIOPTER SETTINGS

Diopter compensation is available for vision defects of up to ± 3.5 diopters to allow the use of this product without eyeglasses.

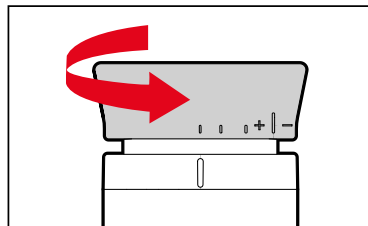

Diopter compensation allows you to adjust the sharpness of the reticule to a value that is best for your vision.

- ▶ Switch on the device
 - The reticule appears.
- ▶ Aim at a distant object
- ▶ Turn the eyecup until the target mark is in sharp focus
 - Check the set value on the diopter scale.

SETTINGS AND OPERATION

ACTIVATING THE RANGEFINDER

- ▶ Press the main switch
 - The device switches on and the target mark appears.

Note

- The device deactivates automatically after a few minutes.

MENU CONTROL

ACCESSING THE MAIN MENU

- ▶ Press and hold the menu selection button **M** (≥ 3 s)
 - **EWJS** appears.


NAVIGATING IN THE MAIN MENU

- ▶ Press the menu selection button repeatedly (< 2 s each time) until the desired menu item appears

EWJS	Meter/Yard display
bt	Bluetooth®-ready
bALL	Ballistic curve
Sd	Zeroing distance
AbC	Ballistic output formats
brtn	Display brightness

SELECTING SETTINGS

- ▶ Press the main switch **M** repeatedly (< 2 s each time) until the desired menu item appears
- ▶ Press the menu selection button briefly
 - The selected setting is initially lit continuously as confirmation, then the display switches to the next menu item and then disappears if no further settings are made.

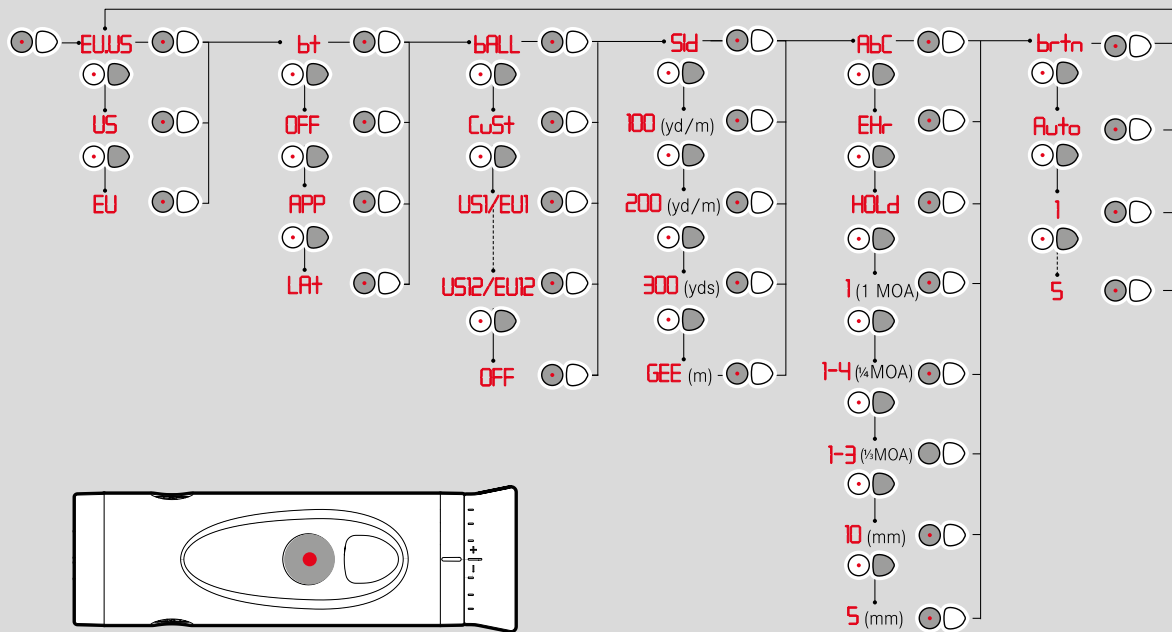

SETTING THE DISPLAY BRIGHTNESS

The brightness sensor can regulate the display brightness automatically or can be set manually in several increments.

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 5x briefly
 - **brtn** appears.
- ▶ Press the main switch several times briefly until the desired setting appears
 - **Auto** = automatic
 - **br1** - **br5** = fixed brightness values
- ▶ Press the menu selection button briefly

SETTING THE ZEROING DISTANCE

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 3x briefly
 - **5d** appears.
- ▶ Press the main switch several times until the desired zeroing distance is displayed
(**100** [m], **200** [m], **GEE** [m], **100** [y], **200** [y], **300** [y])
- ▶ Press the menu selection button briefly

METERING OPERATION

DISTANCE MEASUREMENT MADE EASY



- ▶ Press the main switch briefly
- ▶ Aim the target mark at the object
- ▶ Press the main switch again
 - The target mark disappears briefly and the measured value is displayed.
 - You can do another measurement at any time by pressing the main button while the target mark remains lit.

- - - will appear in the following scenarios:
 - Distance to the object is less than 10 meters
 - Range capability is exceeded
 - Object is not sufficiently reflective

SCAN MODE (OBJECT TRACKING)



- ▶ Press the main switch briefly
- ▶ Aim at the object while target mark is lit
- ▶ Press and hold main switch for approx. 2.5 seconds
 - The device switches to scan mode and will then measure continuously. Scan mode is indicated by a change in the display. A new measured value appears after approx. 0.5 seconds.

METERING RANGE/ACCURACY

Maximum range is achieved in the following scenarios.

- Highly reflective target objects
- At a visual range of around 10 km

Long ranges can be reliably measured or achieved by holding the rangefinder very steady and/or placing it on a solid surface.

Maximum ranges are:

- on highly reflective targets = approx. 2900 m/3170 yds
- Trees = approx. 1850 m/2020 yds
- Game = approx. 1200 m/1310 yds

The measuring range is influenced by the following factors:

Range	longer	shorter
Color	white	black
Angle to lens	perpendicular	acute
Object size	large	small
Sunlight	low light (cloudy)	high light (midday sun)
Atmospheric conditions	clear	hazy
Object structure	homogeneous (house wall)	inhomogeneous (underbrush, tree)


The following range/accuracy applies in sunlight and with good visibility:

Range (in meters)	Accuracy (1 σ) Normal Operation	Accuracy (1 σ) Scan mode
10-200	± 0.5	± 1.5
200-400	± 1	± 2
400-800	± 2	± 3
Above 800	0.5 %	0.5 %

Note

- Distances below 200 m are displayed with an accuracy of one decimal place, e.g. **145.**

DISPLAYING ATMOSPHERIC CONDITIONS

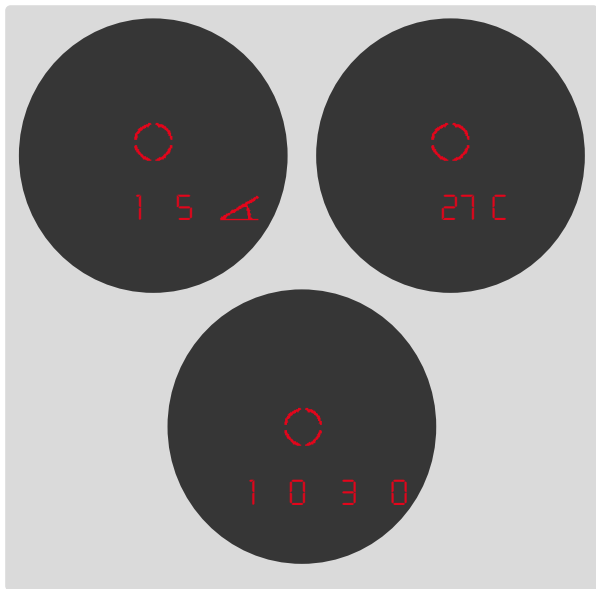

The device determines three crucial pieces of additional information during range measurement to accurately calculate the point of impact:

- The inclination of the device
- Temperature
- atmospheric pressure

These values can be displayed at any time:

- ▶ Press the menu selection button briefly
 - The reticule appears. Then the inclination angle, the temperature and atmospheric pressure are displayed in quick succession for around 2 seconds each.

Note

- If the housing of the device initially has a significantly different temperature than the surroundings, for example when moving from inside to outside, it can take up to 30 minutes before the internal sensor can display the correct ambient temperature again.

BALLISTICS

DETERMINING THE BALLISTIC CURVE

For the precise determination of the impact point correction, the DEVICE includes the bullet trajectory on the basis of the used caliber, as well as the bullet type and weight in the calculation. This can optionally include the calculation adjustment for the equivalent horizontal distance (**EH**, see p. 22) the holdover (**HOLD**, see p. 22) or the elevation adjustment (**1/1-4/1-3/10/5**, see p. 23). 12 fixed, pre-programmed ballistic curves are available for selection, which are listed in the tables included in the appendix.

- ▶ Find the ballistics curve that is closest to the point of impact specified by the ammunitions manufacturer in the relevant table.
- ▶ Setting the selected curve

Example

The rifle scope is zeroed to 100 meters, which means that Table 1 is applicable. The specified point of impact for the ammunition used is -15.0 cm at 200 m. In the relevant column, this is closest to the value 14.5 cm in row **EUT** – and is therefore the correct ballistic curve.

We recommend determining ballistic data in practical tests to select an appropriate curve when using the ballistic function at distances longer than 300 m/yds and/or ammunition types that are not included in the internal device settings. Alternatively, you can calculate a curve using the Leica ballistics calculator and then transfer the information to the device via Bluetooth®. Alternatively, ballistic data can be transferred to your Leica device via Bluetooth® using a relevantly equipped Nielsen-Kellermann/Kestrel device (Elite models or similar, with software by Applied Ballistics).

SETTING THE BALLISTIC CURVE

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 2x
 - **bALL** appears.
- ▶ Press the main switch repeatedly, until the desired ballistic curve is displayed

CuSt	use a previously saved curve from the Leica Hunting app
EUI – EU12 / US1 – US12	select a ballistic curve from the tables included in the appendix
OFF	distance display without point of impact correction (AbC).
LA+	use ballistic correction values by Applied Ballistics (see p. 23).

- ▶ Press the menu selection button briefly

Note

- Once a ballistic curve is set, the device will display the range value for 2 s and then the calculated correction values for 6 s after each distance measurement.

OUTPUT FORMATS (**AbC**)

Advanced Ballistics Compensation (**AbC**) allows the display of the following ballistic values after a measurement is taken.

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 4x briefly
 - **AbC** appears.
- ▶ Press the main switch repeatedly, until the desired setting is displayed
 - equivalent horizontal range (**EH+**)
 - relevant holdover (**HOLD**)
 - The number of clicks required on the reticle quick adjustment
 - **1** (1 MOA, display in absolute values)
 - **1-4** (1/4 MOA, display in clicks)
 - **1-3** (1/3 MOA, display in clicks)
 - **10**mm
 - **5**mm
- ▶ Press the menu selection button briefly

The values **EH+** and holdover (**HOLD**) both take into consideration the following factors.

- measured distance to the target
- inclination angle of the weapon
- measured temperature and atmospheric values
- set zeroing distance

Notes

- The calculation of the above values is based on the currently set ballistic curve. That curve must be selected first.
- For safety reasons, ballistic output values are only specified up to a range of 800 m/yds. The actual measured range is also specified.

EQUIVALENT HORIZONTAL RANGE (EH)

Shots at higher or lower elevation targets are subject to changed ballistic conditions. They require knowledge of the equivalent horizontal range, which is relevant for hunting. Knowledge of the equivalent horizontal range is important, for example when using ballistic reticles. EH values are indicated by the additional EH display.

Note

- Horizontal EH measurements can also result in values that differ from the "straight line" measured distance, e.g. if the temperature and/or the atmospheric pressure vary from pre-programmed values.

HOLDOVER (HOLD)

Holdover is defined as the point that you aim at with the weapon instead of the actual target point to compensate for the variation caused by the trajectory of the bullet (e.g. when using classic hunting reticles). By displaying the holdover, the rangefinder can provide valuable support in achieving the most accurate shots possible when hunting. In addition to distance, the ballistic settings and the ballistic curve you have selected are the basis for calculation.

Note

- Each shot correction always refers to the distance between the shooter and the target. Example: You would have to aim 30 cm higher on the object than without compensation if 300 m 30 is displayed.

IMPACT POINT CORRECTION (USING ELEVATION ADJUSTMENT)

(Click/MoA adjustment)

Variations in the point of impact can be compensated by adjusting the reticle on your rifle scope accordingly.

The rangefinder can display the number of clicks needed by taking into consideration the ballistic curve and the zeroing distance.

You can additionally set for various elevations, on which basis the click stops should be displayed:

- based on the international standard MOA (minutes of angle) graduation
- in 5 or 10 millimeter increments

KESTREL CORRECTION VALUES (LR+)

The **LR+** setting allows the use of ballistic correction values by Applied Ballistics as an alternative for ABC ballistics (**ABC**, see p. 21). This requires a relevantly equipped Nielsen-Kellermann device (Kestrel models). The device connects to the Leica rangemaster via Bluetooth® to receive data like the measured distance, the angle and the target direction. The Nielsen-Kellermann/Kestrel device will include the received data in its calculation of the ballistic values to return the right correction values.

- ▶ Configuring a Nielsen-Kellermann/Kestrel device
- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 1x briefly
 - **lr+** appears.
- ▶ Press the main switch 3x briefly
 - **LR+** appears.
- ▶ Press the menu selection button briefly
 - Bluetooth® is activated and a connection is established.

Notes

- Comply with the ranges of the relevant Nielsen-Kellermann device.
- Read the manual for using Nielsen-Kellermann devices.

DISPLAYING THE CORRECTION VALUES

The displays in **LR+** mode consist of the following:

U (up)	Upward correction
d (down)	Downward correction
L (left)	Correction to the left
r (right)	Correction to the right

LEICA HUNTING APP

The Leica Hunting app allows the setting and storing of personal ballistics profiles. Install the Leica Hunting app on the mobile device.

- ▶ Scan the following QR code with the mobile device

for iOS:



for Android:



or

- ▶ The app is available from Apple App Store™/Google Play Store™

CONNECTION

ESTABLISHING A CONNECTION

IN THE RANGEFINDER

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 1x briefly
 - **bt** appears.
- ▶ Press the main switch 2x briefly
 - **APP** appears.
- ▶ Press the menu selection button briefly
 - Bluetooth® is activated and a connection is established (***** appears).

ON THE MOBILE DEVICE

- ▶ Activate Bluetooth®
- ▶ Launch the Leica Hunting app
- ▶ Select the relevant device

DISCONNECT THE CONNECTION

- ▶ Press and hold the menu selection button
- ▶ Press the menu selection button 1x briefly
 - **bt** appears.
- ▶ Press the main switch 1x briefly
 - **OFF** appears.
- ▶ Press the menu selection button briefly
 - Bluetooth® is deactivated and the connection disconnects.

REMOTE CONTROL

All functions and settings of the Leica Rangemaster can be done via the remote control.

- ▶ Establishing a connection
- ▶ Operate the desired functions via the app

FIRMWARE UPDATES

Leica is continuously working on the further improvement and optimization of their products. Some of these improvements and expansions of the functional scope can be installed at a later time. Leica releases so-called firmware updates at irregular intervals for that purpose. These updates are handled via the Leica Hunting app.

The information contained in this manual references the most current firmware version at the time of market launch.

- ▶ Establishing a connection
- ▶ Follow in-app instructions

Caution

- Do not switch off the device during the update process!

CARE/CLEANING

- Your Leica rangefinder requires no special care.
- Coarse dirt particles like sand should be removed with a soft brush or simply blown off.
- Do not use excessive force when cleaning a severely soiled lens surface. The coating is abrasion resistant, but not impervious to sand or salt crystals.
- Always rinse off any traces of salt water! Dried salt crystals could damage the surfaces.
- Fingerprints, etc. on front lenses and eyepiece lenses can be pre-cleaned with a damp cloth and then wiped dry with a clean leather or lint-free cloth.
- The rangefinder should be stored in a well-ventilated, dry and cool place to prevent fungal growth (particularly important in humid climates).
- Do not use alcohol or chemical cleaning solutions on the optics or housing.

TECHNICAL DATA

Device designation	LEICA RANGEMASTER CRF 3500.COM
Type	9418
Magnification	7x
Lens diameter	24 mm
Exit pupil	3.4 mm
Twilight factor	13
Relative brightness	11.8
Field of view (at 1,000 m/yds)	115.6 m
Subjective viewing angle	6.6°
Eye relief	15 mm
Prism system	Roof
Coating	on lenses: high Durable Coating (HDC™) and hydrophobic Aqua-Dura® coating on external lenses on prisms: phase correction coating P 40
Diopter adjustment	± 3.5 dpt.
Operating temperature range	-20 to 55°C
Storage temperature	-40 to 85°C
Waterproofing	for 30 min: waterproof to 1 m deep
Housing/chassis material	Carbon fiber reinforced plastic, softcoated / die-cast magnesium
Range	Maximum range approx. 3200 m/3500 yds, equivalent horizontal distance approx. to 1,100 m/1203 yds, ballistic output values approx. to 800 m/875 yds, minimum range approx. 10 m/11 yds
Metering methods	Single measurement, scan mode
Measuring accuracy	10-200: ± 0.5, 200-400: ± 1, 400-800: ± 2, above 800: 0.5%
Display/Unit of measure	4 seven-segment LEDs plus additional icons, optional display setting in yard/inch or meter/centimeter
Laser	Invisible, safe for eyes in compliance with EN and FDA Class 3R, laser beam divergence approx. 0.85 x 1.28 mrad
Interfaces	Bluetooth® 5.0 (Low Energy), frequency range: 2402-2480 MHz, max. output: 4 dBm
Max. measurement time	0.3 s
Battery	3 V lithium cell (type CR2)
Battery life	approx. 1,700 measurements at 20°C
Dimensions (W x H x D)	approx. 75 x 34 x 113 mm
Weight (with battery)	approx. 185 g

Subject to changes in design, production, and scope of delivery.

LEICA CUSTOMER CARE

Please contact Leica Camera AG Customer Care for the maintenance of your Leica equipment and for help and advice regarding Leica products and how to order them. You can also contact the Customer Care department or the repair service provided by your regional Leica subsidiary for repairs or warranty claims.

Leica Camera AG
Leica Customer Care
Am Leitz-Park 5
35578 Wetzlar
Germany

Phone: +49 (0)6441 2080-189

Fax: +49 (0)6441 2080-339

Email: customer.care@leica-camera.com

www.leica-camera.com

APPENDIX

Conditions: atmospheric pressure 1013 mbar, Temperature 20°C, horizontal shots.

ZEROING DISTANCE 100 m

		Bullet drop (cm)											
		EU1	EU2	EU3	EU4	EU5	EU6	EU7	EU8	EU9	EU10	EU11	EU12
Distance (m)	0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0
	25	-3.0	-2.9	-2.7	-2.5	-2.4	-2.3	-2.2	-2.0	-1.9	-1.7	-1.7	-1.6
	50	-1.4	-1.3	-1.0	-0.8	-0.7	-0.6	-0.3	-0.1	0.0	0.3	0.3	0.3
	75	-0.4	-0.3	-0.1	0.0	0.1	0.2	0.4	0.6	0.7	0.9	0.9	0.9
	100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
	125	-0.2	-0.3	-0.7	-1.0	-1.1	-1.4	-1.6	-1.9	-2.0	-2.3	-2.3	-2.5
	150	-1.0	-1.4	-2.2	-2.9	-3.2	-3.9	-4.6	-5.1	-5.5	-6.2	-6.3	-6.9
	175	-2.5	-3.3	-4.7	-5.8	-6.5	-7.7	-8.9	-9.8	-10.4	-11.6	-12.2	-13.2
	200	-4.7	-6.1	-8.1	-9.7	-11.0	-12.9	-14.5	-15.9	-17.0	-18.9	-20.1	-21.7
	225	-7.8	-9.8	-12.4	-14.8	-16.8	-19.4	-21.6	-23.5	-25.4	-28.1	-30.0	-32.3
	250	-11.7	-14.5	-17.9	-21.1	-24.0	-27.3	-30.1	-33.0	-35.8	-39.3	-42.2	-45.3
	275	-16.5	-20.3	-24.5	-28.6	-32.6	-36.6	-40.5	-44.4	-48.3	-52.6	-56.5	-60.6
	300	-22.2	-27.3	-32.4	-37.5	-42.6	-47.7	-52.8	-57.9	-63.0	-68.1	-73.2	-78.3
	325	-28.9	-35.7	-41.5	-47.7	-54.5	-60.9	-67.1	-73.5	-79.9	-85.8	-92.3	-98.8
	350	-36.9	-45.4	-52.0	-59.2	-68.4	-76.1	-83.6	-91.3	-99.0	-105.7	-113.8	-122.8
	375	-46.2	-56.5	-63.9	-72.2	-84.5	-93.4	-102.2	-111.4	-120.6	-127.9	-138.4	-150.3
400	-56.7	-69.5	-77.2	-86.5	-102.8	-113.0	-123.2	-133.8	-144.5	-152.6	-166.4	-181.3	
425	-68.7	-84.6	-92.0	-102.4	-123.3	-134.9	-146.4	-158.6	-171.3	-179.5	-197.8	-215.9	
450	-81.9	-101.9	-108.8	-120.4	-146.1	-159.0	-171.9	-185.8	-201.6	-209.1	-232.9	-254.6	
475	-97.0	-121.5	-127.8	-140.4	-171.3	-185.6	-199.9	-216.1	-235.4	-241.5	-271.4	-297.9	
500	-114.2	-143.3	-148.9	-162.5	-199.5	-215.1	-231.0	-250.0	-272.7	-277.4	-313.8	-345.8	

		Bullet drop (cm)											
		EU1	EU2	EU3	EU4	EU5	EU6	EU7	EU8	EU9	EU10	EU11	EU12
Distance (m)	0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0
	25	-2.4	-2.1	-1.7	-1.3	-1.1	-0.7	-0.3	0.0	0.2	0.7	0.8	1.1
	50	-0.3	0.2	1.0	1.6	2.0	2.7	3.3	3.8	4.2	5.0	5.3	5.8
	75	1.3	2.0	2.9	3.7	4.2	5.0	5.9	6.5	7.0	8.0	8.4	9.0
	100	2.3	3.1	4.0	4.8	5.5	6.4	7.3	7.9	8.5	9.5	10.0	10.8
	125	2.8	3.5	4.4	5.1	5.8	6.7	7.4	8.1	8.6	9.5	10.2	11.0
	150	2.5	3.2	3.8	4.4	5.1	5.7	6.3	6.8	7.2	8.0	8.7	9.4
	175	1.6	2.0	2.4	2.7	3.2	3.5	3.9	4.1	4.4	4.9	5.4	5.7
	200	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
	225	-2.5	-2.9	-3.3	-3.9	-4.5	-4.9	-5.3	-5.6	-6.3	-6.8	-7.4	-7.9
	250	-5.8	-6.8	-7.7	-9.0	-10.3	-11.2	-12.0	-13.1	-14.6	-15.7	-17.1	-18.2
	275	-10.0	-11.8	-13.4	-15.3	-17.5	-18.9	-20.5	-22.5	-25.0	-26.6	-28.9	-30.8
	300	-15.1	-18.1	-20.2	-22.9	-26.1	-28.4	-31.0	-34.0	-37.5	-39.7	-43.1	-45.7
	325	-21.3	-25.7	-28.4	-31.9	-36.6	-40.0	-43.5	-47.6	-52.3	-55.0	-59.7	-63.6
	350	-28.7	-34.7	-37.9	-42.2	-49.2	-53.6	-58.2	-63.5	-69.4	-72.6	-78.7	-84.9
	375	-37.3	-45.0	-48.7	-54.0	-63.9	-69.3	-75.1	-81.6	-88.8	-92.5	-100.7	-109.7
	400	-47.3	-57.2	-61.0	-67.1	-80.9	-87.3	-94.2	-102.0	-110.6	-114.7	-126.2	-138.0
425	-58.6	-71.6	-74.8	-81.9	-100.0	-107.5	-115.6	-124.7	-135.3	-139.4	-155.2	-169.8	
450	-71.3	-88.1	-90.6	-98.6	-121.5	-130.1	-139.3	-149.9	-163.5	-166.5	-187.7	-205.8	
475	-85.7	-106.9	-108.5	-117.4	-145.3	-155.0	-165.5	-178.2	-195.2	-196.6	-223.8	-246.4	
500	-102.3	-128.1	-128.6	-138.3	-172.1	-182.9	-194.9	-210.1	-230.4	-230.1	-263.7	-291.5	

ZEROING DISTANCE AZD (m) (AZD = Advantageous Zeroing Distance)

Bullet drop (cm)												
	EU1	EU2	EU3	EU4	EU5	EU6	EU7	EU8	EU9	EU10	EU11	EU12
GEE	222	208	195	185	179	170	163	157	154	148	147	144
Distance (m)	0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0	-5.0
	25	-2.1	-2.0	-1.7	-1.5	-1.5	-1.3	-1.1	-1.0	-0.9	-0.7	-0.7
	50	0.2	0.4	0.8	1.2	1.3	1.5	1.7	1.9	2.0	2.3	2.3
	75	2.0	2.3	2.7	3.0	3.1	3.2	3.5	3.6	3.7	3.8	3.8
	100	3.3	3.5	3.8	3.9	4.0	4.0	4.1	4.0	4.0	3.9	3.9
	125	4.0	4.0	4.0	3.9	3.9	3.7	3.4	3.1	3.0	2.6	2.6
	150	4.0	3.8	3.4	3.0	2.8	2.1	1.5	0.9	0.5	-0.3	-0.5
	175	3.3	2.7	1.9	1.1	0.5	-0.7	-1.7	-2.8	-3.4	-4.8	-5.4
	200	1.9	0.8	-0.6	-1.9	-3.1	-4.8	-6.4	-7.9	-8.9	-11.1	-12.2
	225	-0.3	-2.0	-4.0	-6.0	-7.9	-10.3	-12.5	-14.5	-16.3	-19.3	-21.2
	250	-3.4	-5.8	-8.5	-11.4	-14.1	-17.2	-20.0	-22.9	-25.7	-29.6	-32.4
	275	-7.4	-10.7	-14.1	-17.9	-21.7	-25.5	-29.3	-33.4	-37.2	-41.9	-45.8
	300	-12.3	-16.9	-21.1	-25.8	-30.7	-35.6	-40.6	-45.9	-50.9	-56.4	-61.5
	325	-18.2	-24.4	-29.3	-35.0	-41.6	-47.7	-53.9	-60.5	-66.8	-73.0	-79.6
	350	-25.3	-33.3	-38.9	-45.6	-54.6	-61.9	-69.4	-77.3	-85.0	-92.0	-100.1
	375	-33.7	-43.5	-49.8	-57.6	-69.7	-78.3	-87.0	-96.4	-105.5	-113.3	-123.7
	400	-43.5	-55.6	-62.1	-70.9	-87.0	-96.9	-106.9	-117.8	-128.4	-136.9	-150.7
425	-54.5	-69.9	-76.0	-85.9	-106.5	-117.7	-129.2	-141.5	-154.2	-162.9	-181.2	
450	-67.0	-86.3	-91.9	-102.9	-128.4	-140.9	-153.7	-167.7	-183.5	-191.5	-215.3	
475	-81.2	-105.0	-109.9	-121.9	-152.6	-166.4	-180.7	-197.0	-216.3	-222.9	-252.9	
500	-97.5	-126.0	-130.0	-143.1	-179.8	-194.8	-210.8	-229.8	-252.7	-257.8	-294.3	
GEE[m]	222	208	195	185	179	170	163	157	154	148	147	144

		Bullet drop (in)											
		US1	US2	US3	US4	US5	US6	US7	US8	US9	US10	US11	US12
Distance (y)	0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0
	25	-1.2	-1.2	-1.1	-1.1	-1.1	-1.0	-1.0	-0.9	-0.9	-0.8	-0.8	-0.8
	50	-0.6	-0.6	-0.5	-0.4	-0.4	-0.4	-0.3	-0.2	-0.2	-0.1	-0.1	-0.1
	75	-0.2	-0.2	-0.1	-0.1	-0.1	0.0	0.0	0.1	0.1	0.2	0.2	0.2
	100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
	125	0.0	0.0	-0.1	-0.2	-0.3	-0.3	-0.4	-0.5	-0.6	-0.7	-0.7	-0.7
	150	-0.1	-0.3	-0.6	-0.8	-0.8	-1.1	-1.3	-1.5	-1.6	-1.9	-1.9	-2.0
	175	-0.5	-0.8	-1.3	-1.6	-1.8	-2.2	-2.6	-2.9	-3.1	-3.5	-3.7	-3.9
	200	-1.1	-1.6	-2.3	-2.8	-3.2	-3.8	-4.3	-4.8	-5.1	-5.8	-6.1	-6.5
	225	-2.0	-2.7	-3.6	-4.3	-4.9	-5.8	-6.6	-7.2	-7.7	-8.6	-9.1	-9.8
	250	-3.2	-4.1	-5.2	-6.3	-7.1	-8.2	-9.2	-10.1	-10.9	-12.1	-12.9	-13.9
	275	-4.6	-5.8	-7.2	-8.6	-9.8	-11.2	-12.4	-13.6	-14.8	-16.3	-17.4	-18.7
	300	-6.3	-7.9	-9.6	-11.3	-12.9	-14.5	-16.1	-17.7	-19.3	-21.1	-22.7	-24.2
	325	-8.4	-10.4	-12.4	-14.5	-16.5	-18.5	-20.5	-22.6	-24.6	-26.7	-28.7	-30.6
	350	-10.7	-13.3	-15.7	-18.1	-20.7	-23.1	-25.6	-28.1	-30.6	-33.0	-35.4	-37.9
	375	-13.5	-16.7	-19.3	-22.1	-25.5	-28.5	-31.4	-34.4	-37.3	-40.0	-43.0	-46.2
	400	-16.6	-20.5	-23.4	-26.7	-31.1	-34.5	-37.9	-41.4	-44.8	-47.8	-51.5	-55.8
425	-20.2	-24.9	-28.0	-31.6	-37.3	-41.2	-45.1	-49.1	-53.1	-56.3	-61.1	-66.5	
450	-24.3	-29.9	-33.0	-37.1	-44.3	-48.7	-53.1	-57.6	-62.3	-65.7	-71.9	-78.3	
475	-28.7	-35.7	-38.7	-43.1	-52.1	-56.9	-61.8	-66.9	-72.5	-75.8	-83.8	-91.3	
500	-33.7	-42.2	-45.0	-49.8	-60.6	-65.9	-71.3	-77.1	-83.8	-86.8	-96.9	-105.9	

ZEROING DISTANCE 200 y

Bullet drop (in)													
	US1	US2	US3	US4	US5	US6	US7	US8	US9	US10	US11	US12	
Distance (y)	0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0
	25	-1.1	-1.0	-0.8	-0.7	-0.7	-0.5	-0.4	-0.3	-0.2	-0.1	0.0	0.0
	50	-0.4	-0.2	0.1	0.3	0.4	0.6	0.8	1.0	1.1	1.4	1.4	1.6
	75	0.2	0.4	0.7	1.0	1.1	1.4	1.7	1.9	2.1	2.4	2.5	2.7
	100	0.6	0.8	1.1	1.4	1.6	1.9	2.2	2.4	2.6	2.9	3.0	3.3
	125	0.8	1.0	1.3	1.5	1.7	2.0	2.3	2.5	2.6	2.9	3.1	3.4
	150	0.7	0.9	1.1	1.3	1.5	1.8	2.0	2.1	2.2	2.5	2.7	2.9
	175	0.5	0.6	0.7	0.8	1.0	1.1	1.2	1.3	1.4	1.5	1.7	1.8
	200	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
	225	-0.7	-0.9	-1.0	-1.2	-1.4	-1.5	-1.7	-1.8	-1.9	-2.1	-2.3	-2.5
	250	-1.7	-2.1	-2.4	-2.8	-3.2	-3.5	-3.8	-4.1	-4.5	-4.9	-5.3	-5.7
	275	-3.0	-3.6	-4.1	-4.7	-5.4	-6.0	-6.4	-7.0	-7.7	-8.3	-9.1	-9.7
	300	-4.6	-5.5	-6.2	-7.1	-8.2	-8.9	-9.6	-10.5	-11.6	-12.5	-13.6	-14.4
	325	-6.5	-7.8	-8.7	-9.9	-11.3	-12.4	-13.5	-14.7	-16.2	-17.3	-18.8	-20.0
	350	-8.7	-10.5	-11.7	-13.2	-15.1	-16.5	-18.0	-19.7	-21.6	-22.9	-24.8	-26.4
	375	-11.3	-13.7	-15.1	-16.9	-19.6	-21.4	-23.2	-25.3	-27.7	-29.2	-31.6	-34.0
	400	-14.3	-17.3	-18.9	-21.0	-24.7	-26.9	-29.2	-31.7	-34.6	-36.2	-39.4	-42.7
425	-17.8	-21.5	-23.2	-25.7	-30.6	-33.2	-35.9	-38.9	-42.2	-44.1	-48.2	-52.6	
450	-21.7	-26.3	-27.9	-30.8	-37.2	-40.2	-43.3	-46.8	-50.7	-52.7	-58.2	-63.6	
475	-26.0	-31.9	-33.3	-36.5	-44.6	-47.9	-51.5	-55.5	-60.3	-62.1	-69.4	-75.8	
500	-30.8	-38.2	-39.3	-42.8	-52.7	-56.5	-60.5	-65.0	-71.0	-72.4	-81.7	-89.5	

		Bullet drop (in)											
		US1	US2	US3	US4	US5	US6	US7	US8	US9	US10	US11	US12
Distance (y)	0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0	-2.0
	25	-0.7	-0.5	-0.3	-0.1	0.0	0.2	0.4	0.6	0.7	1.0	1.1	1.2
	50	0.4	0.7	1.1	1.5	1.7	2.1	2.4	2.7	3.1	3.4	3.7	4.0
	75	1.4	1.8	2.3	2.8	3.2	3.6	4.1	4.5	5.0	5.5	5.9	6.3
	100	2.1	2.6	3.2	3.8	4.3	4.8	5.4	5.9	6.4	7.0	7.6	8.1
	125	2.7	3.3	3.9	4.5	5.1	5.7	6.3	6.9	7.5	8.1	8.7	9.4
	150	3.0	3.7	4.3	4.9	5.6	6.2	6.8	7.4	8.0	8.7	9.5	10.1
	175	3.2	3.8	4.3	5.0	5.7	6.3	6.8	7.4	8.1	8.8	9.6	10.2
	200	3.1	3.7	4.1	4.7	5.4	5.9	6.4	7.0	7.7	8.3	9.0	9.6
	225	2.7	3.2	3.6	4.2	4.7	5.1	5.6	6.1	6.8	7.2	7.8	8.3
	250	2.1	2.5	2.8	3.2	3.6	3.9	4.2	4.7	5.2	5.5	6.0	6.3
	275	1.2	1.4	1.6	1.8	2.0	2.2	2.4	2.7	2.9	3.1	3.3	3.5
	300	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
	325	-1.5	-1.9	-2.0	-2.2	-2.5	-2.8	-3.1	-3.4	-3.7	-3.8	-4.1	-4.3
	350	-3.3	-4.1	-4.4	-4.9	-5.6	-6.2	-6.8	-7.4	-8.0	-8.3	-9.0	-9.6
	375	-5.5	-6.9	-7.3	-8.0	-9.4	-10.3	-11.2	-12.2	-13.2	-13.6	-14.7	-15.9
	400	-8.2	-10.0	-10.6	-11.6	-13.9	-15.1	-16.4	-17.7	-19.1	-19.6	-21.3	-23.5
425	-11.3	-13.7	-14.4	-15.6	-19.1	-20.6	-22.2	-24.0	-25.8	-26.4	-29.0	-32.1	
450	-14.8	-18.1	-18.6	-20.1	-25.0	-26.9	-28.9	-31.0	-33.3	-34.0	-37.9	-42.0	
475	-18.7	-23.2	-23.4	-25.2	-31.7	-33.9	-36.3	-38.8	-41.9	-42.3	-47.9	-53.0	
500	-23.1	-29.1	-29.0	-31.0	-39.1	-41.7	-44.4	-47.5	-51.6	-51.6	-59.1	-65.5	